

14–250 Removal and installation of air pump


Federal and California version model year 1975

Removal

1 Compress hose clip on contoured hose of air pump with combination pliers and push approx. 2 cm to the rear.

2 Loosen clamping screws (1 and 2) as well as fastening screw (3) and unscrew.

3 Remove V-belt and contoured hose, remove air pump.

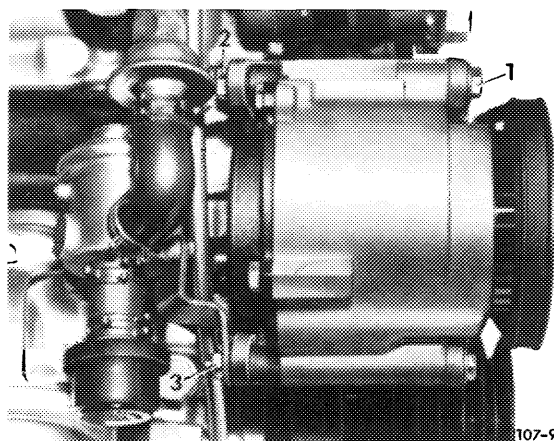

107-9113

Installation

4 For installation proceed vice versa.

Note: The V-belt is correctly tensioned if it can be resiliently pushed down by energetic thumb pressure.