

## 03–330 Removal and installation of radial ball bearing and closing ring in crankshaft

---

### Special tools

---

Countersupport for internal puller



000 589 33 33 00

Internal puller 14.5–18.5 mm




000 589 25 33 00

---

### Removal

---

1 Pull ball bearing and closing ring out of crankshaft together with countersupport and internal puller.

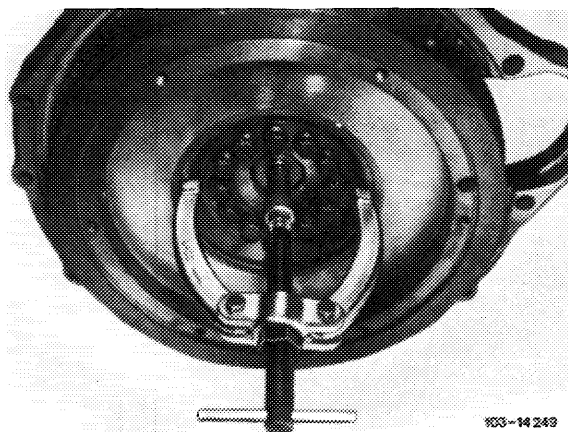

## Installation

- 2 Provide new ball bearing (1) with anti-friction bearing grease and knock into crankshaft with a suitable mandrel.
- 3 Knock-in closing ring (2).

