





- | | | | | | |
|----|---|-----|-------------------------------------|---|--|
| 1 | Control pressure line | 11a | Connection leak line
1st version | A | Warm-up compensator prior to
September 1981 |
| 2 | Fuel distributor | 12 | Distributor | a | Vacuum connection for full load
enrichment |
| 3 | Control pressure line with Tecalan
1st version | 13 | Connecting hose | i | Connection to leak line (atmosphere) |
| 3a | Control pressure line with Tecalan
2nd version, starting with increased output | 14 | Screw | B | Warm-up compensator starting
September 1981 |
| 4 | Warm-up compensator | 15 | Corrugated washer | a | Vacuum connection for full load
enrichment |
| 5 | Vacuum hose for full load enrichment | 16 | Leak line | i | Connection to leak line (atmosphere) |
| 6 | Hose clamp | 18 | Screw | | |
| 6a | Hose clamp for emission version only | 19 | Corrugated washer | | |
| 7 | Fuel return line | 20 | Gasket | | |
| 8 | Hose clamp | 21 | Flange | | |
| 9 | Contour hose | 22 | Closing plug | | |
| 9a | Connection for ignition retard | 23 | Fastening holder | | |
| 10 | Auxiliary air valve | 24 | Thermo time switch | | |
| 11 | Contour hose | 25 | Sealing ring | | |
| | | 26 | Pressure damper | | |