


20-430 Testing radiator or expansion tank closing cap


Radiator or expansion tank closing cap

Pressure relief valve opens at	new cap $1.0 \begin{smallmatrix} +0.15 \\ -0.1 \end{smallmatrix}$ bar gauge pressure
	used cap 1.0-0.2 bar gauge pressure
Vacuum valve opens starting at	0.1 bar vacuum

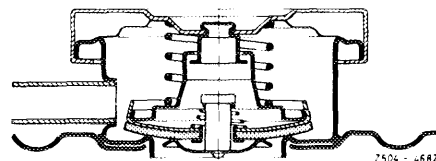

Special tools

Tester for cooling system and radiator cap

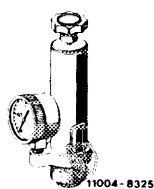

001 589 48 21 00


Double connection for radiator cap in combination with cooling system tester



000 589 73 63 00

Checking pressure relief valve

- 1 Attach double connection to leak tester by means of holding clips.
- 2 Place radiator cap on double connection.
- 3 Check opening pressure by pumping.

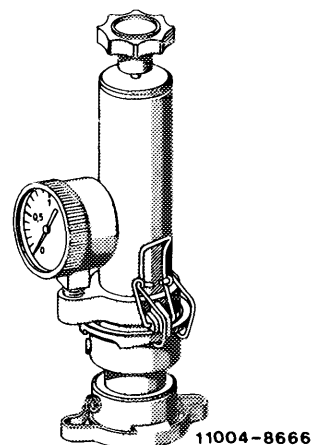

Checking vacuum valve

Vacuum valve (arrow) should rest against rubber seal, should lift off easily and snap back following release.

