



**Expansion tank closing cover**

Pressure relief valve opens at	new closing cover
	$1.0 \pm 0.15$ bar gage pressure
Vacuum valve starts opening at	used closing cover
	1.0–0.2 bar gage pressure
Vacuum valve starts opening at	0.1 bar vacuum

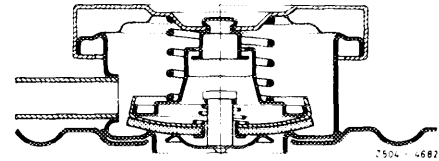

**Special tools**

Tester for cooling system

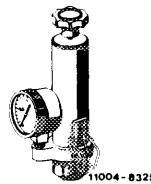

001 589 48 21 00


Double connection for expansion tank closing cover for cooling system tester



000 589 73 63 00

**Checking pressure relief valve**

- 1 Attach double connection on tester for cooling system by means of holders.
- 2 Place expansion tank closing cover on double connection.
- 3 Check by pumping opening pressure.

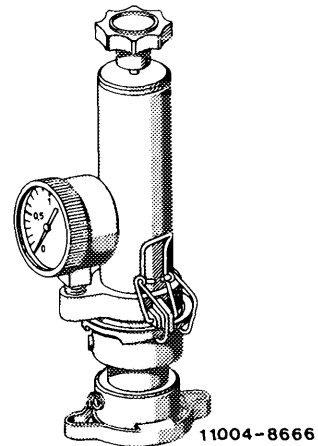

11004-8666

**Checking vacuum valve**

The vacuum valve (arrow) should rest against rubber seal, valve should lift easily and snap back upon release.

