

Type of grease

Grease

refer to „Specifications for Service Products“

Page 266

Note

In difficult road conditions or in continual short distance operations, grease front and rear axle at more frequent intervals!

Clean grease nipples before greasing!


Total number of grease nipples:

Models 108, 111, 113 = 16


Model 109 = 18

Front axle – grease nipples:


- Steering knuckle = 3 each
- Upper wishbone = 2 each
- Lower wishbone = 2 each

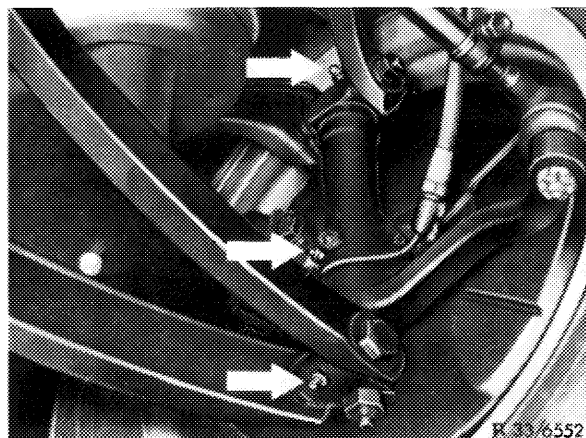


Steering knuckle

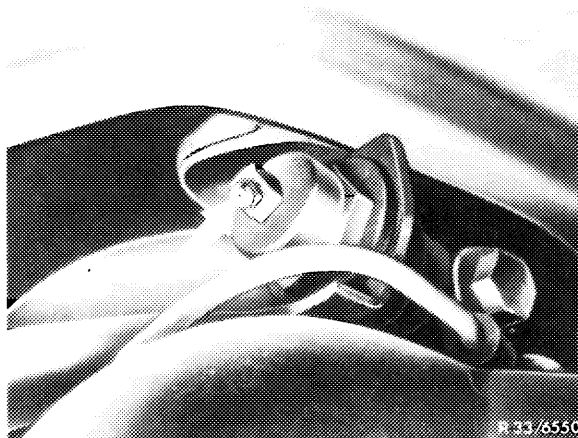


Upper wishbone front

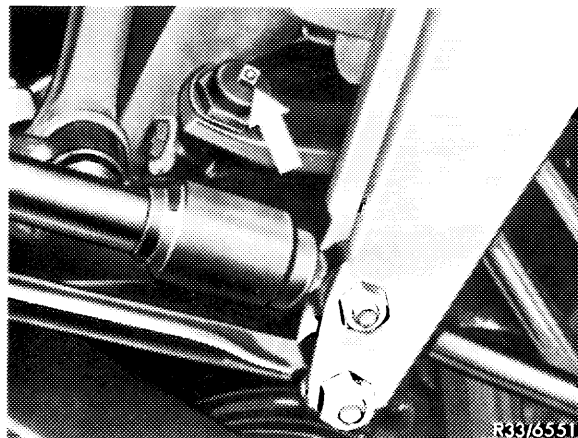


Upper wishbone rear

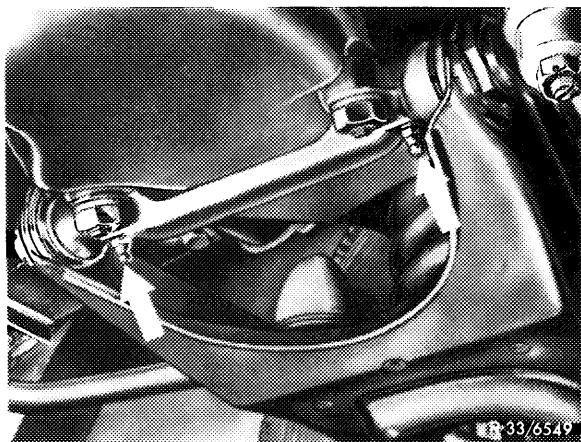

Lower wishbone

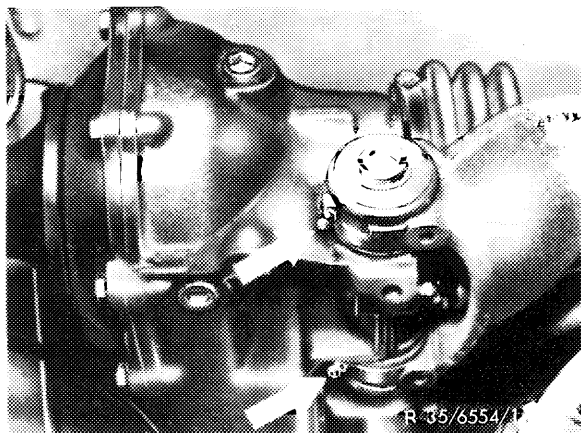

Axle tube seat, right

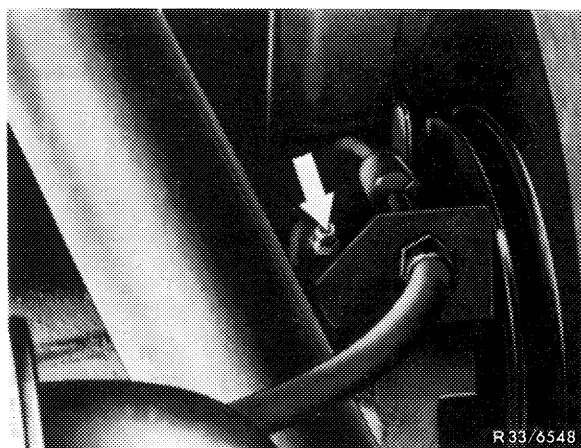

Anti-dive mounting on axle tubes

Rear axle – grease nipples:

- Rear axle tube seat (right) = 2

- On model 109 there is one additional grease nipple on the anti-dive mounting on the axle tube, left and right.