
Models 100 109

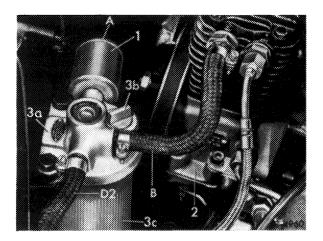

- A ir suction intake and air release outlet
 Air filter
 Valve housing of anti-freeze device

• Mount new air filter on anti-freeze device, observing correct seat of rubber sealing ring.

Note: On model 100 the air filter is connected to the anti-freeze device by a hose line.