

- On engine 110 the recesses in the cylinder head must be blown out with compressed air prior to removing the spark plugs.
- Fit spark plugs according to spark plug table.
- Approximate torque for tightening of spark plugs 25–30 Nm (2.5–3 kpm).