
Engine 130

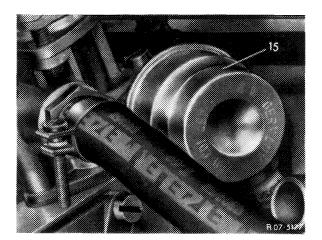

Attention! Do not clean auxiliary air filter, but replace.

• Before installing the new auxiliary air filter, check with the engine running at operating temperature, that the auxiliary air of the warm-up device has closed down.