

All models

Revision: Interval changed from 2 to 3 years.

Renew coolant together with antifreeze every 3 years. In addition, use additive (anti-corrosion oil) at a concentration of 1 % (10 cc/l) (refer to „Specifications for service products“ page no. 310 to 321.1 and 325).

For models 107, 116 and 123, the additive (anti-corrosion oil) may be left out when antifreeze is used. But it is absolutely required when using water only.

To prevent corrosion, the concentration of the antifreeze should not drop below 30 percent by volume ( $-20^{\circ}\text{C}/-4^{\circ}\text{F}$  antifreeze protection).

**Attention!** Use approved antifreeze and additives only to protect light alloy components against any possibility of damage.

For draining and adding coolant, refer to job no. 20-010.