

Safety Headrest

Adjust headrest to support the back of the head at the level of the upper end of the ear.

Height adjustment:

Press headrest slightly forward (1) and reset upward or downward.


Detaching headrests:

Pull headrest out to the stop. Release arrester by depressing locking knob to be felt under the backrest covering

material and pull up headrest, holding it by the LH headrest post (viewed in driving direction). Finally pull out headrest completely with both hands.

The headrest locking knob of the front seat is located below the LH headrest post (2).

The headrest locking knob of the rear seat is located between the two headrest posts.

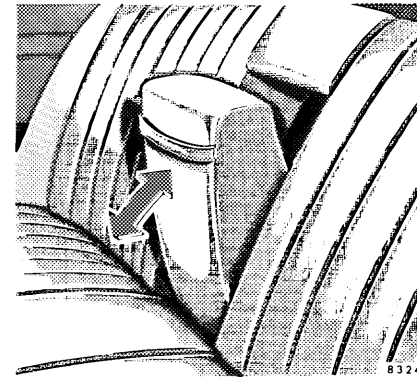

Arm Rest (Rear Seat)

A center arm rest is provided in the rear seat which can be pulled out with a loop.

For the removal of the rear seat cushion see "Practical Hints".