


Controls

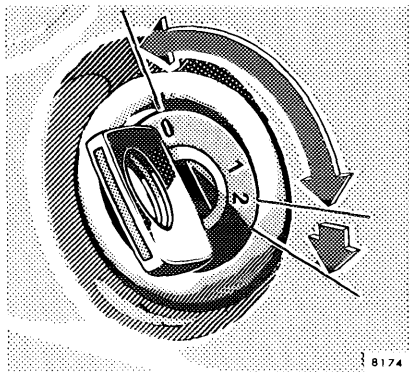

Steering Lock

0 Off position: When the key is withdrawn the steering is locked. To unlock the steering, the key must be turned to position "1". The lights can be switched on. The key can be removed only in this position.

Note:

Do not remove key from steering lock while the vehicle is in motion as this will cause the engagement of the steering lock thus rendering the vehicle inoperable.

2 Driving: The steering is unlocked. (When turning the key clockwise to position "2", slightly move the steering wheel, if required.) The red charging control light comes on. Power supply to standing lights is cut off.

Starting position:


Turn key clockwise to the stop. The starter is engaged as long as the key is held up to the stop. Due to the starter non-repeat unit, the key must be returned to position "0" before making another starting attempt.

With the key in position "1", the steering is unlocked. The radio can be switched on.

A warning buzzer sounds when the key has been left in steering lock positions "1" or "0" and the driver's door is opened.

Light Switch

- 0** Off-position
- 1** Parking lights (includes side marker lights, tail lights, license plate lights, instrument panel lights)

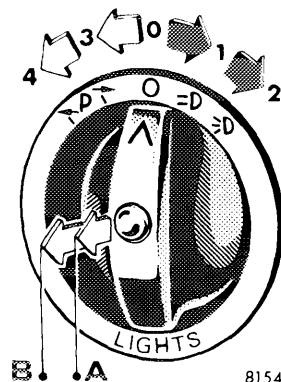

- 2** Same as pos. 1 plus headlights
- 3** Standing lights, right
- 4** Standing lights, left
- A** Turn to position 2 and pull out to first detent = same as position 2 plus fog lights
- B** Available for an option

Note:

With the steering lock key removed and the driver's door open a signal sounds if the vehicle's exterior lighting is not switched off (standing lights excepted).