

8392

### Interior Lights


The switch for the front light has 3 positions.

Position I: light is switched on and off by the front door contact switches (450 SEL: driver's door with delay switch).

Position II: light is continuously switched off.

Position III: light is continuously switched on.

The rear courtesy light is switched on and off by the rear door contact switches or by the rocker switch on the instrument panel.

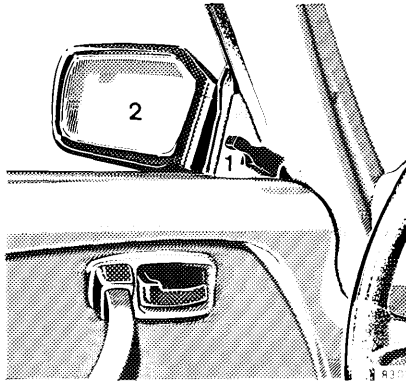


8397

The reading lights in the rear passenger compartment are switched on and off by means of a switch in each light.

### Rear View Mirrors

Outside rear view mirror: Outside rear view mirror (2) can be randomly adjusted from inside by means of lever (1). If the mirror housing has been forcibly removed from its safety catch, it must be repositioned by applying firm pressure.

Inside rear view mirror: Mirror housing can be randomly adjusted.

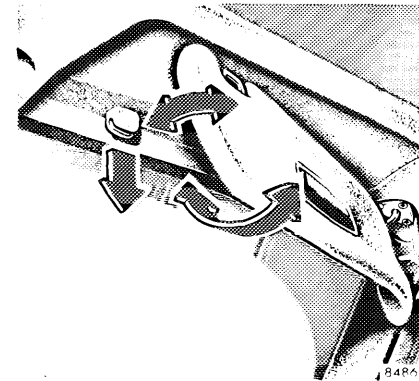

8486

In addition mirror can be dimmed by means of lever on lower mirror edge. Lever in opposite driving direction = normal position. Lever in driving direction = anti-dazzle position.

### Sun Visor

To protect against sunlight from ahead, fold the sun visor downwards.

In the event of strong sunlight through the side windows, remove the sun visor from its inner fixture and swing it sideways.