



### Electric Window Lifters

Switch group for window lifters:

- 1 front, left
- 2 rear, left
- 3 front, right
- 4 rear, right
- S Safety switch

The electric window lifters can only be operated with the steering lock in position "2". All four windows can then be operated using the switches in the center console. The rear door windows can also be operated using the switches (5) in each rear door panel as long as the safety switch "S" in the center console is depressed. If the

safety switch is not depressed, inadvertent operation of the rear door windows (for instance, by children) is prevented.

The front door windows move slower than the rear door windows.

When the ignition switch is turned off, the windows cannot be operated.