

MERCEDES-BENZ Maintenance System

Engine Oil Change and Filter Change

To be carried out every 6,000 miles (10,000 km), but at least twice a year (in spring and autumn).

Under severe operating conditions the oil should be changed every 3,000 miles (5,000 km). It is not mandatory to change the filter at this oil change.

For regular oil level checks, refer to "Checking Fuels, Coolants, Lubricants, etc."

Automatic Transmission — Fluid and Filter Change

To be carried out every 37,500 miles (60,000 km) according to the maintenance booklet.

Under severe operating conditions, have the automatic transmission fluid changed every 12,500 miles (20,000 km) (without filter change).

Spare Parts Service

All MERCEDES-BENZ service stations store the MERCEDES-BENZ original spare parts required for maintenance and repair work. In addition, depots are provided all over the globe intended to ensure the rapid supply of MERCEDES-BENZ original spare parts.

More than 200,000 different spare parts, even for rather old vehicle models, are furthermore stocked in the central plant warehouses.

We warrant maximum operational efficiency and reliability as well as optimum retention of the vehicle value when MERCEDES-BENZ original spare parts are installed, as they are subjected to most severe quality inspections. Each part has been specifically developed, manufactured or selected for and adapted to MERCEDES-BENZ vehicles. For this reason, only MERCEDES-BENZ original spare parts should be installed.

