


Practical Hints

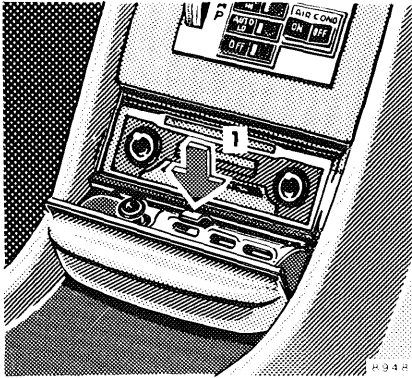


Ash trays

To remove front ash tray:
Pull ash tray out as far as possible.
Push down the spring (1) in the center and remove ash tray.

To remove rear ash tray:
Push the ash tray down while opening and remove.

Installation, front and rear:
Position ash tray squarely and push in.

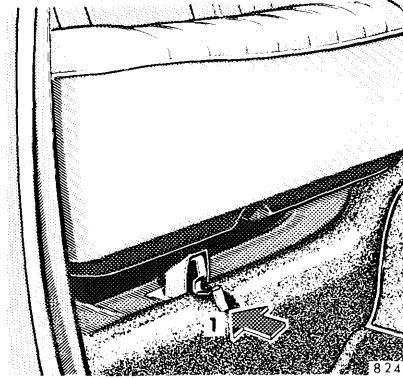

Rear Seat Cushion

Removal: Push in left and right spring clamps (1), slightly raise rear seat cushion at the front side and pull towards the front.

Installation: Push rear end of rear seat cushion under rear seat back as far as it will go and press seat cushion front section downwards until it rests on the cushion support.