


B. Model 116

Removal

- 1 Remove instrument cluster (54–250).
- 2 Remove tachometer (54–253).

Note: The indicating instruments for temperature, tank capacity and oil pressure can be exchanged only together with switch plate.

- 3 Unscrew fastening screws (2) of switch plate and potentiometer (9) and remove switch plate complete with indicating instruments.

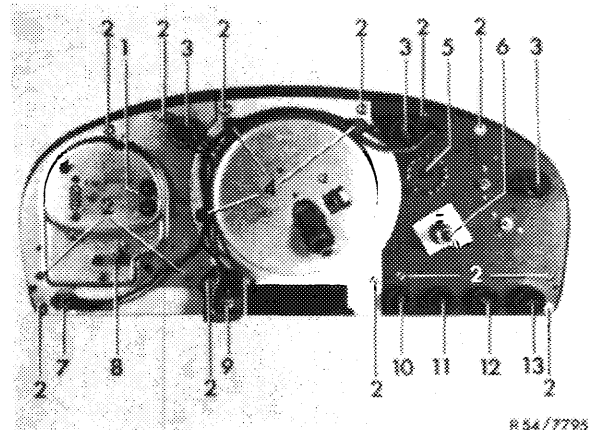

Installation

- 4 For installation proceed vice versa.

Switch plate removed

- 1 Switch plate
- 2 Potentiometer
- 3 Indicator lamp for turnsignal right
- 4 Instrument light
- 5 Fastening screws
- 6 Round nuts

