


Model 116.120 is provided with a revolution counter as standard equipment.

The revolution counter is activated via adapter for TDC transmitter in diagnosis socket. The adapter for TDC transmitter is clipped into cover of diagnosis socket.

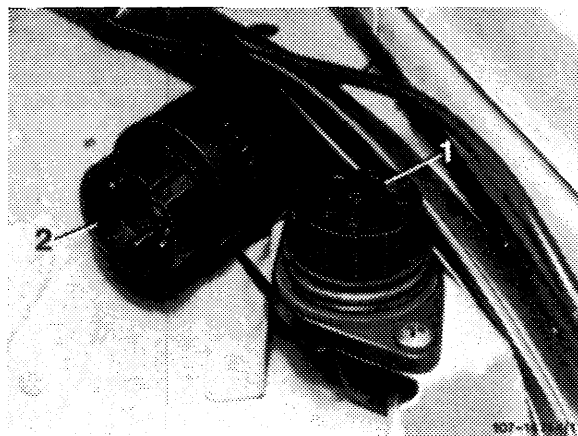

1 Socket (diagnosis)
2 Adapter for TDC transmitter

Electric wiring diagram
Revolution counter

- 1 Adapter for TDC transmitter
- 2 TDC transmitter
- 3 Revolution counter
- 4 Cable connector
- a To warning light brake lining wear indicator
- b To terminal 15 (fuse No. 4)
- c To switching unit overload protection

