


Removal


1 Disconnect battery negative terminal.

2 Pull off knob (3) (mounted conically).

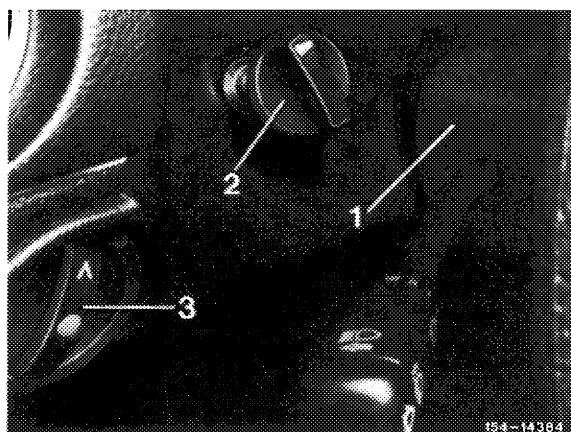

3 Unscrew nut and remove cover with symbols.


4 Remove cover under instrument panel left (68-150).

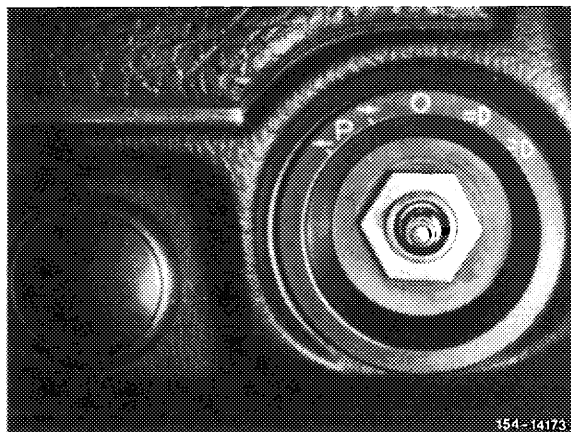


5 Remove lighting switch from instrument panel in downward direction.

Installation

6 For installation proceed vice versa. Make sure that lighting switch (1) and cover (2) are engaging in recess.

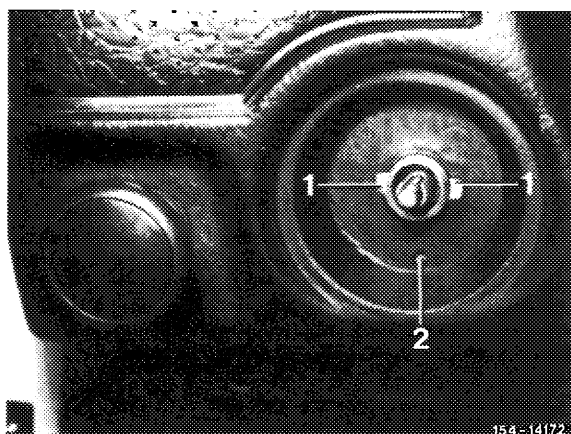

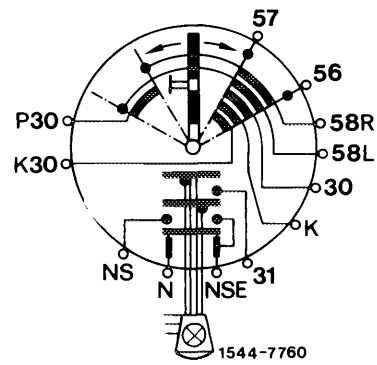

Connection diagram rotary light switch

Terminal	Designation	Line cross section	Cable color
30	Battery plus	6	red
K30	Licence plate lamp input	0.75	grey/red
P30	Standing lamp input	0.75	green/white
31	Ground for rear fog lamp	1.5	brown
56	Driving lamp	2.5	white/yellow
57	—	—	—
58 L	Parking-, tail lamp left	2.5	grey/white
58 R	Parking-, tail lamp right	1.5	grey
NSE	Rear fog and fog lamp input	1.5	grey/yellow/green
NS	Rear fog lamp output	1.5	grey/green
N	Fog lamp output	1.5	grey/green
K	Instrument lamps input	0.5	grey/green/purple
	Licence plate lamps	0.75	
	Switch lamps	0.75	grey/purple