


54–391 Renewing bulb for ashtray light

1 Take ashtray out of holder.

2 Unscrew fastening screws (1) of ashtray top.

3 Pull off top (2).

4 Pull socket (3) with bulb out of blade receptacle contact (4) and exchange bulb.

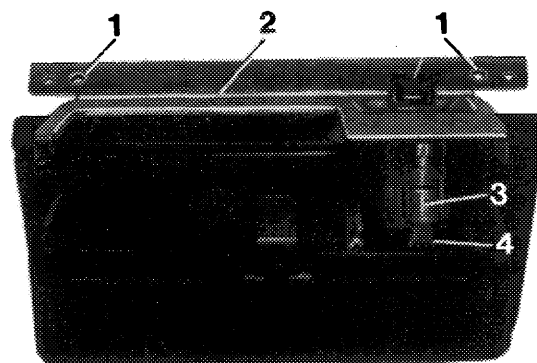

154-14383

5 For assembly of ashtray proceed vice versa.