


1 Remove cover under instrument panel or instrument cluster.


2 Pull 2-pole coupling from sensor (3).

3 Connect Ohmmeter to sensor (3). On 1st version resistance should amount to 50–106 Ohms and on 2nd version to 650–1370 Ohms.

4 If this value is exceeded or not attained, replace sensor (3).

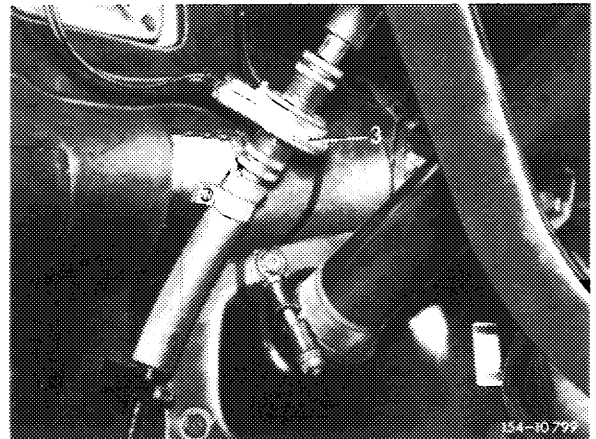

1st version

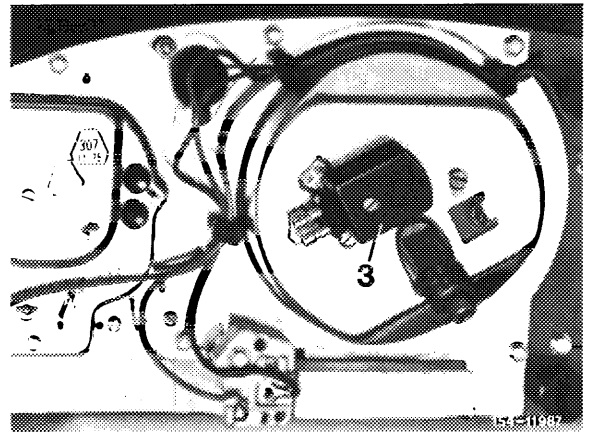

2nd version