


54–525 Checking cable control

1 Remove air cleaner.

2 Advance regulating linkage (13) to full throttle, the wire strand should move for approx. 20 mm without any resistance within cable control envelope (14).

3 Check adjustment, while strand should rest against regulation free of tension and with minimum play.

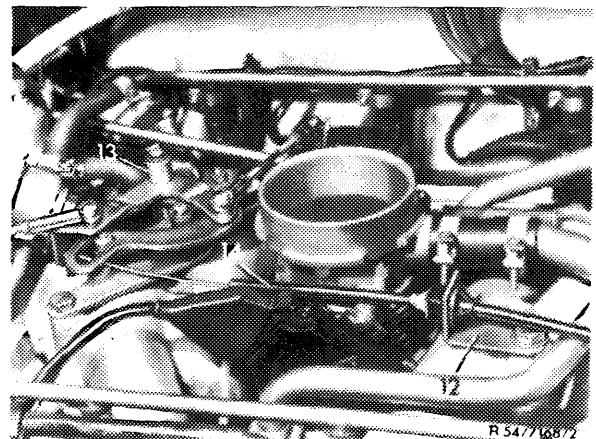

4 Replace cable control at slightest evidence of strain (54–555).

5 Adjust cable control, if required (54–560).