

Removal


1 Remove lefthand cover under instrument panel.

2 Disconnect line harness of sensor (3) on blue plug connection of line harness.


3 Loosen tachometer shaft from front wall.

4 Unscrew coupling nut of tachometer shaft from sensor (3) and remove sensor (3).

Layout model 107

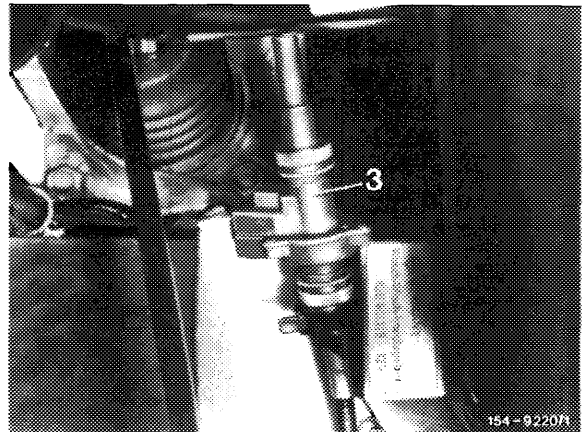

Layout model 114

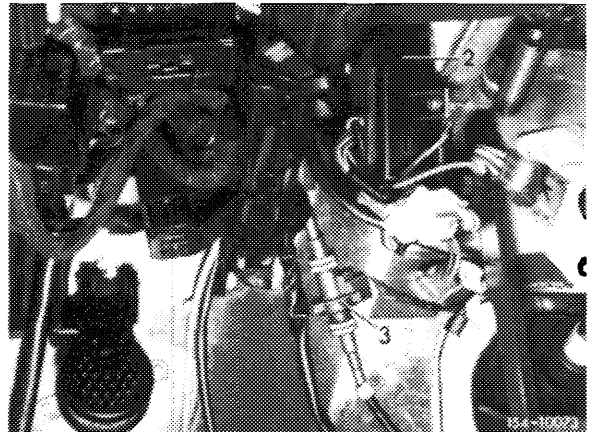

Installation

5 For installation, proceed vice versa.

6 Perform function test on road.

Layout model 116

