



Removal

- 1 Remove cover under instrument panel on driver's side.
- 2 Remove plug coupling from control unit (2) and from bracket.
- 3 On vehicles with automatic transmission unscrew control unit (2) with holder from pedal bearing bracket. Then remove control unit (2) from holder.


Model 107 and 1st version model 116

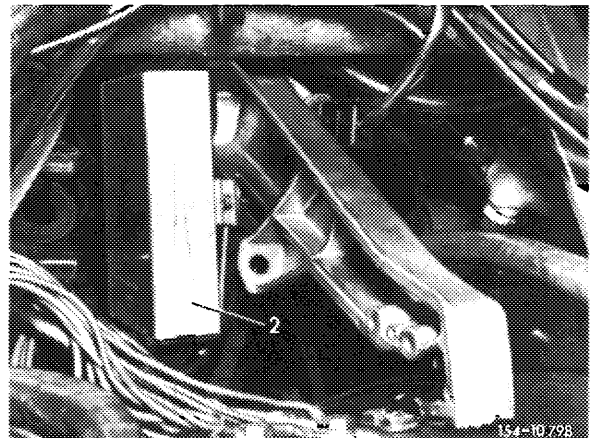


Models 114, 115

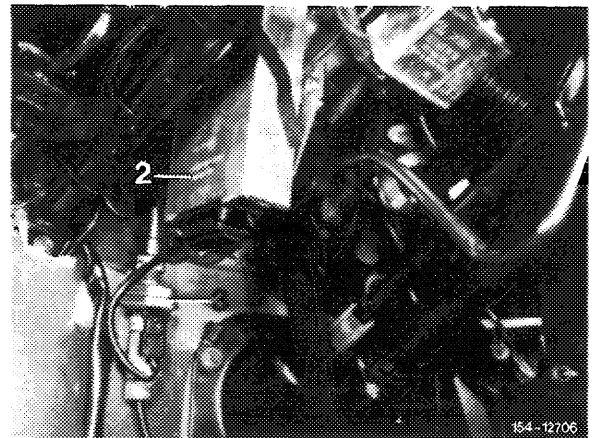


2nd version model 116

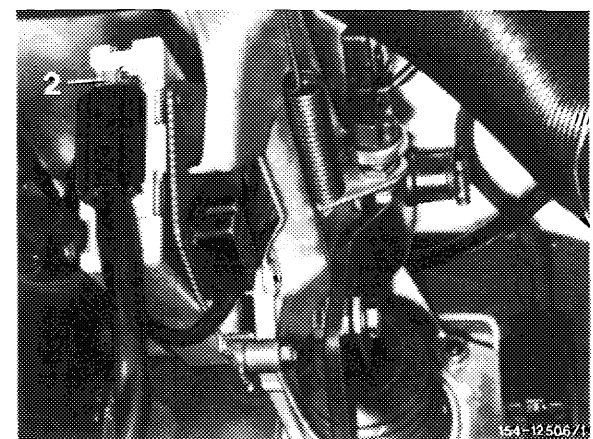

Model 116 righthand steering
a Pedal bearing bracket

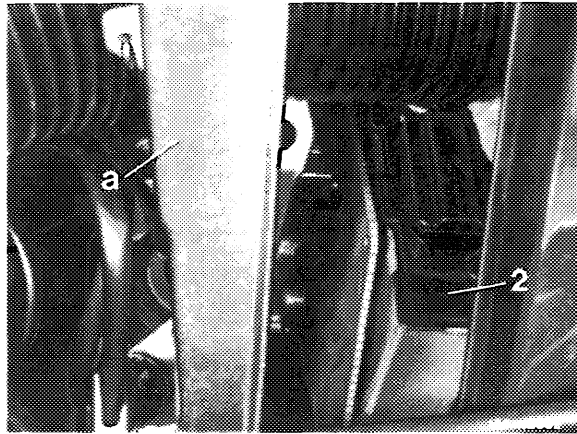


Model 123
with automatic transmission

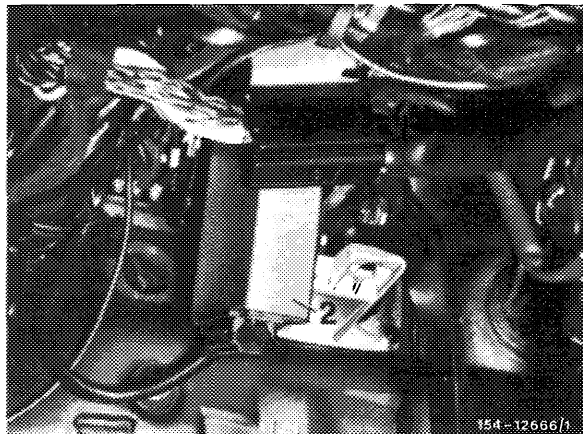

4 On vehicles with manual transmission, unscrew control unit from holder of cover.

Model 123 with manual transmission

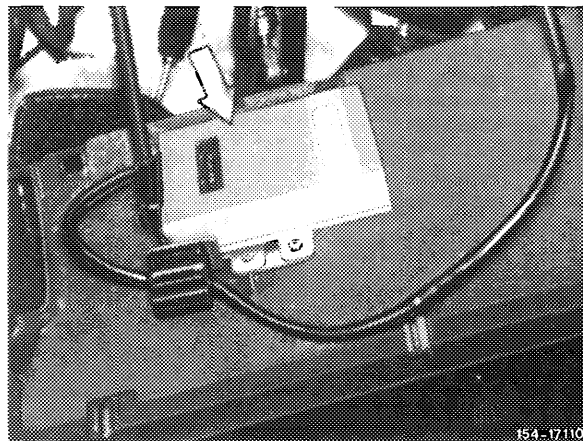

Installation

- 5 For installation proceed vice versa.
- 6 Perform function test on road.