


Removal

- 1 Remove driver's seat or rear seat cushion (91—105 or 91—170).
- 2 Remove carpet in driver's leg room or rear floor.
- 3 Remove cover on box—type pillar (68—470).
- 4 Push out cover rail (1) under driver's door or rear door by means of a plastic wedge.
- 5 Pull off carpet at entrance (2).

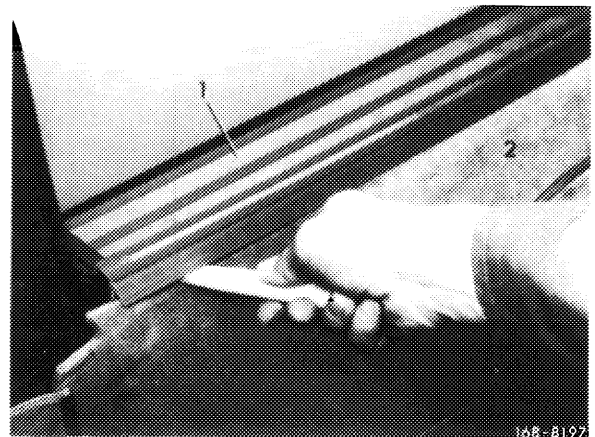

Installation

- 6 For installation proceed vice versa.

Note: For gluing, use MB universal glue part No. 000 989 92 71.