

68–500 Removal and installation of trim strips

Note

Plastic clips should be removed from packages which have been opened and placed in water in order to ensure that their elasticity is maintained.

Trim strip on engine hood front

Unscrew three sheet-metal screws and remove trim strip together with support.

Trim strip above lighting unit

- 1 Remove lighting unit.
- 2 Unscrew both sheet-metal screws on trim strip.
- 3 Remove trim strip together with support.

Trim strip laterally on front fender

Push trim strip out of clip holes with plastic wedge and remove.

Trim strips on window frame

Refer to 72–300.

Trim strip on entrance

- 1 Unscrew sheet-metal screw front on trim strip.
- 2 Starting at the rear, push trim strip out of clip holes with plastic wedge and remove.

Trim strip on driver's or rear door

Push trim strip out of clip holes with plastic wedge and remove.

Trim strip laterally on rear fender

Push trim strip out of clip holes with plastic wedge and remove.