


Removal

- 1 Unscrew the three screws (1) at top on rear wall.
- 2 Unscrew the five screws (2) at bottom on trunk floor and remove partition.

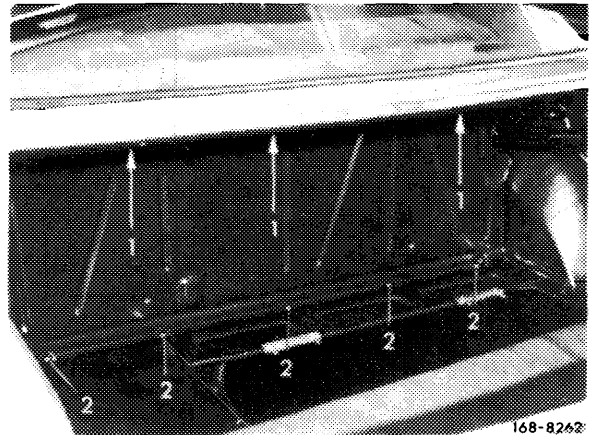

Installation

Note: Prior to installing partition, glue 2 moltopren layers between the bottom edge of the fuel tank and the partition.

- 3 For further installation proceed vice versa.