



72-140 Removal and installation of arm rest with grip

Removal

- 1 Disconnect insert (1) and remove.
- 2 Unscrew screw for recess (2).

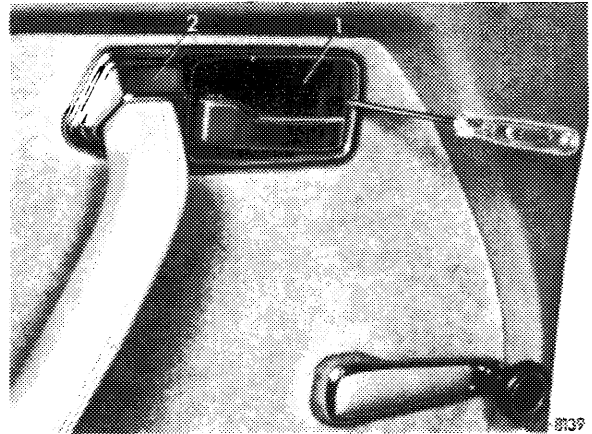

- 3 Unscrew screw (3) on grip (4).

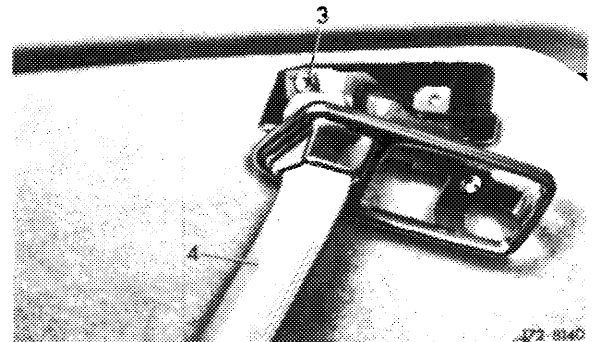

- 4 Unscrew screw (5) on arm rest.
- 5 Push arm rest out of door lining in forward direction.

Installation

- 6 For installation proceed vice versa

