


72–160 Removal and installation of inside sealing strip

Removal

- 1 Remove door lining (72–100).
- 2 Remove clips (1) together with sealing strip (2) in upward direction.

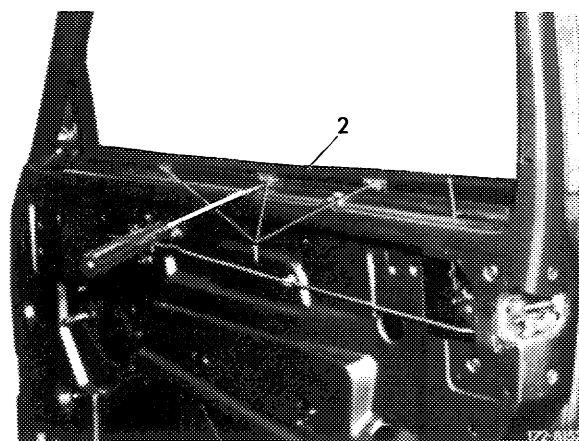

Installation

- 3 For installation proceed vice versa.