


72-170 Removal and installation of outer sealing strip

Removal

- 1 Remove trim strip on edge of outer door panel.
- 2 To prevent damaging the paint, hold plastic wedge under clip (1) and push off clip by canting screwdriver.
- 3 Remove sealing strip without buckling.

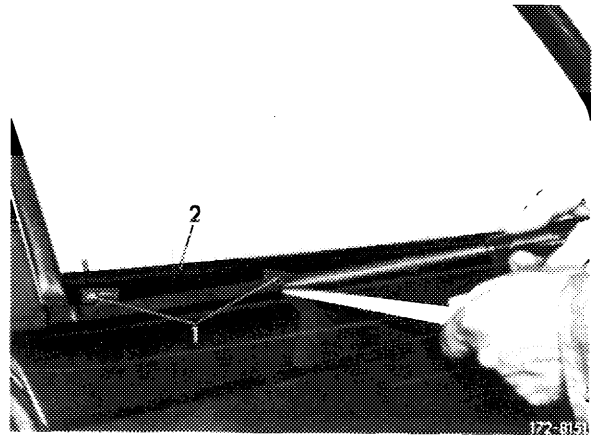

Installation

- 4 For installation proceed vice versa.