



**Note**

The crank window is adjusted on window guide rail (4) and on window lifting rail (5).

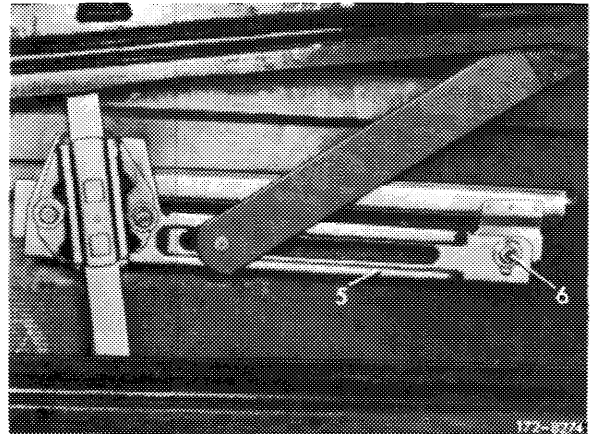

**Adjustment**


1 Loosen screws (3) on window guide rail (4).

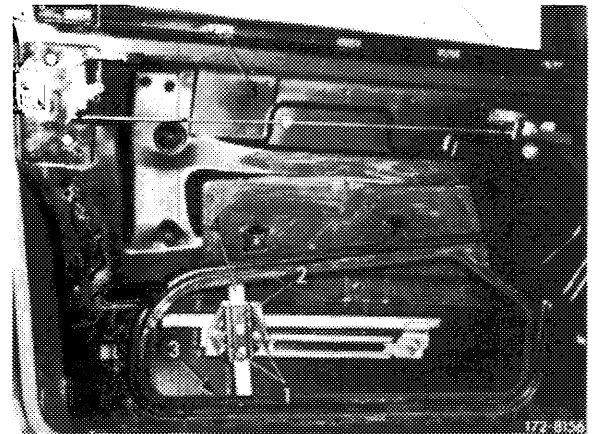

2 Loosen screw (6) on window guide rail (5).

3 Crank window completely up.


**Note:** With the window closed, the rear edge of the crank window should rest against window running rail along entire length.

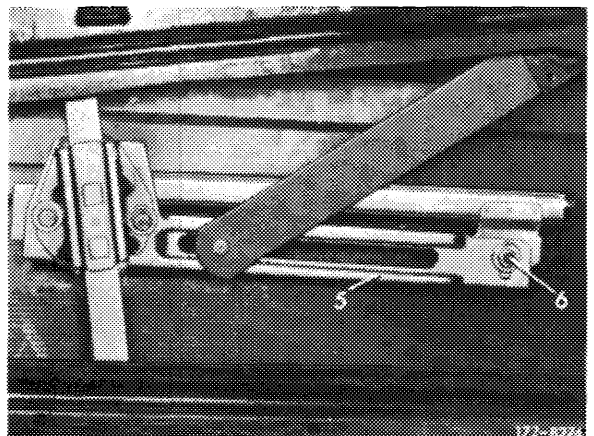

4 In this position, tighten **upper** screw (3) on window guide rail (4).

5 Crank window completely down.

6 Tighten screw (3) **bottom** on window guide rail (4) in this position.

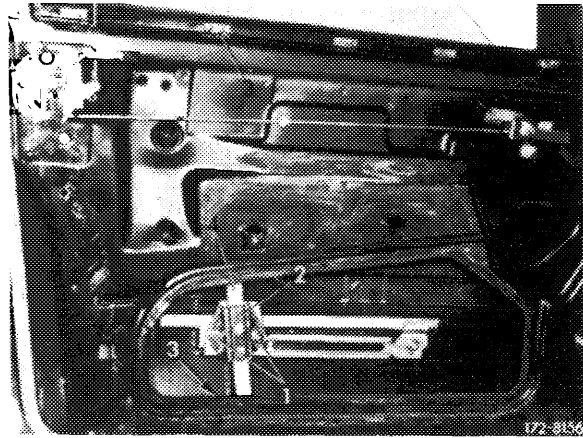

7 Crank window up again.

8 Adjust preload in longitudinal direction of window pane with screw (6) on oblong hole of window lifting rail (5).

**Note:** Pretension can be increased by lifting the pane in relation to window lifting rail (5). Pretension crank window until rear edge of pane no longer lifts off on window running rail when cranked down.

