


### Removal

---

- 1 Pull off seal (2) for door holder opening.
- 2 Pull off safety lock on bolt (2) and remove bolt. Watch out for two spacing washers (3).
- 3 Force off holding rails for sealing frame on driver's door at door front end starting from above by means of a plastic wedge and remove together with plastic clips (4).

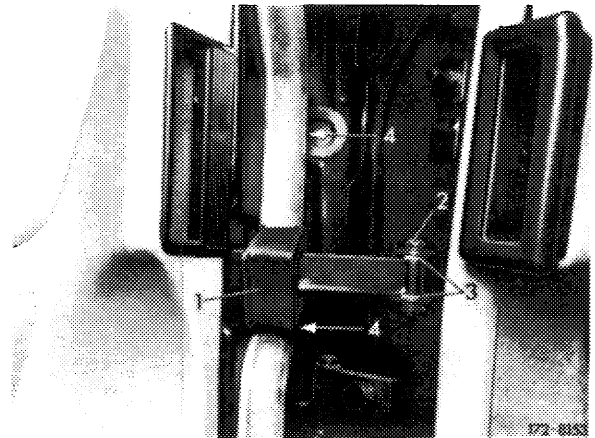

- 4 Push plastic clips on rear door out of door front end.
- 5 Pull sealing frame out of door fold and remove.

### Installation

---

- 6 For installation proceed vice versa.

**Note:** In lower front corner, glue sealing frame with MB universal glue part No. 000 989 92 71.

Always replace clips.