


72–230 Removal and installation of inside door actuation

Removal

- 1 Remove door lining (72–100).
- 2 Pull off plastic sheeting in upper range.
- 3 Force off safety lock (1) on pull rod (2) and disconnect pull rod on inside door actuation.
- 4 Unscrew screws (3) on inside actuation and remove inside actuation.

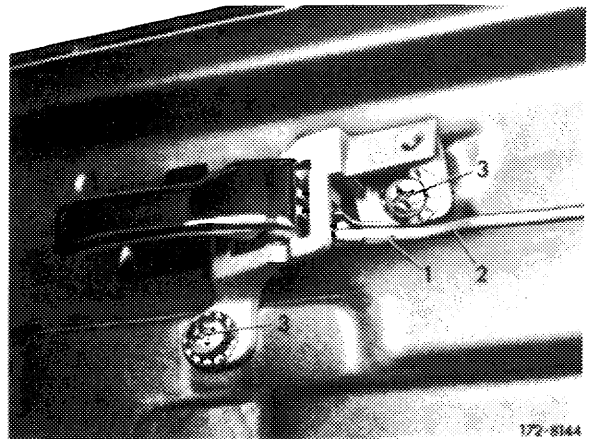

Installation

- 5 For installation proceed vice versa.

Note: Adjust linkage free of play.