

72-240 Removal and installation of outside door handle


Data

Clearance between drive screw and door lock

1 mm


Removal

- 1 Push out closing disc (1).
- 2 Unscrew the two screws behind disc.
- 3 Push door handle forward.
- 4 Pull grip and remove entire door handle.

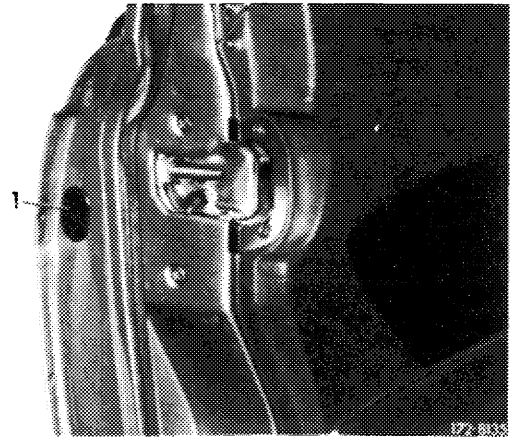


Installation

- 5 Pull grip and insert door handle into cutout of door.

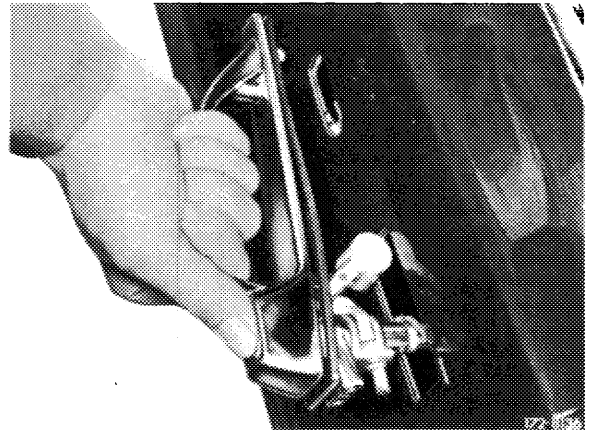


- 6 Introduce torsion bar (2) into torsion nut (3).

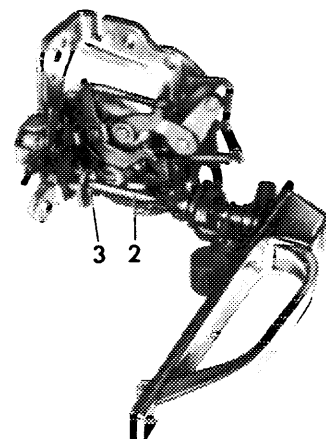

7 Push door handle toward the rear and tighten.
Make sure that drive screw (4) enters door lock.


The clearance between the drive screw (4) and the door lock should be 1 mm and is set on drive screw (4).

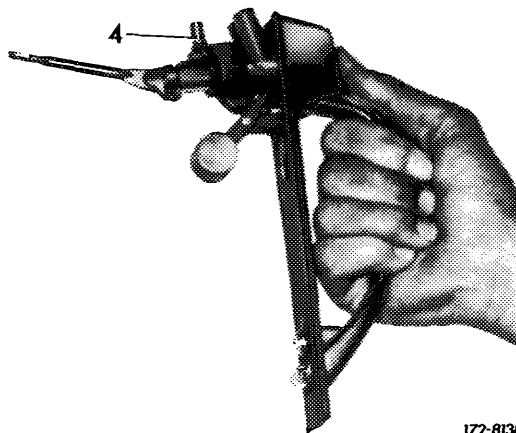

172-8138

8 Push-in closing disc (1).

9 Check function of lock with ignition key.

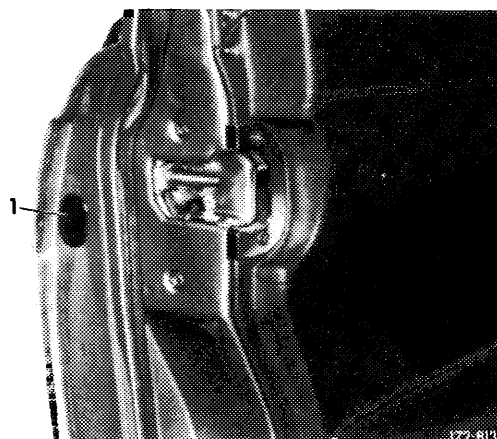

172-8135