


72-300 Removal and installation of trim strips on window frame

Removal

- 1 Remove crank window (72-190).
- 2 Remove flexible window running rail (72-198).
- 3 Remove front window guide rail on driver's door.
- 4 Force trim strip (1) from window frame by means of a plastic wedge.
- 5 Then push off trim strip (2).

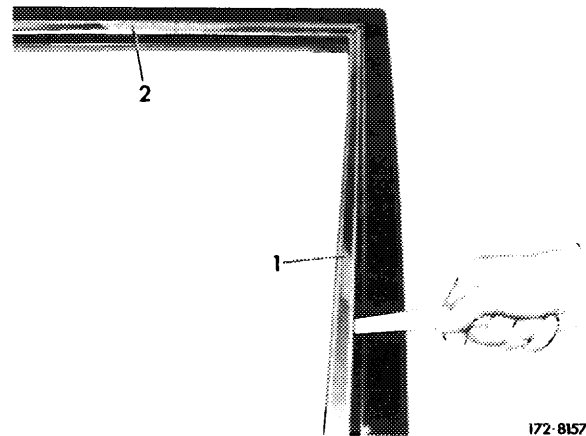

172-8157

Installation

- 6 Remove sealing compound from window frame and from trim strips.
- 7 Insert trim strips with Terostat 415, Part No. 000 989 98 85 in vice versa sequence.