


## 75-102 Removal and installation of trunk lid lock

---


### Removal

---

- 1 Unscrew four screws (1) on cover (2).
- 2 Force cover (2) out toward the rear.
- 3 Unscrew three screws (3) and remove lower half of trunk lid lock (4).

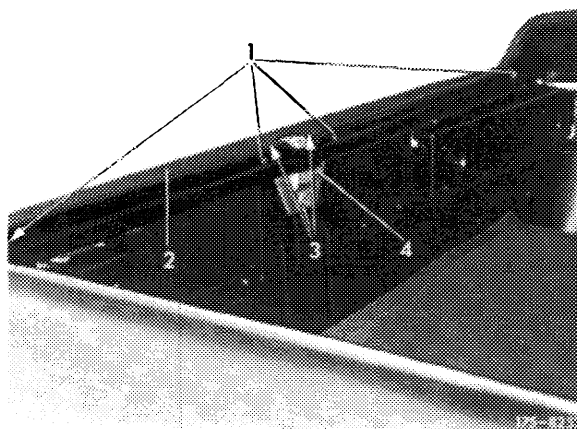

- 4 Unscrew both nuts (5) with socket wrench (SW 8). With central interlocking system, disconnect lever (6) on snap lock.
- 5 Pull-out snap lock in forward direction.

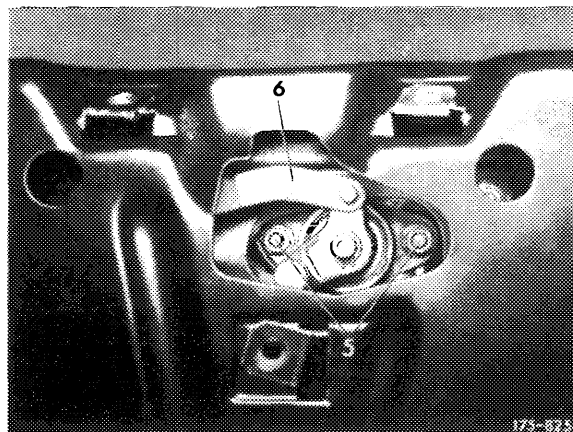

### Installation

---

- 6 For installation proceed vice versa.