


75–112 Removal and installation of hinge lever for trunk lid spring

Removal

- 1 Remove trunk lid (75–100).
- 2 Remove hat rack (68–458).
- 3 Unscrew screw (1) on rear wall top.
- 4 Unscrew screw (2) from direction of trunk.
- 5 Remove hinge lever (3) together with spring housing.

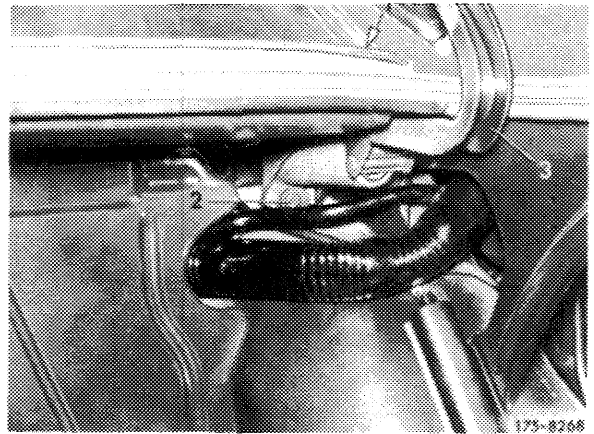

Installation

- 6 For installation proceed vice versa.