



Removal

1 With sliding roof 3/4 open, loosen sliding roof headlining (2) and remove in forward direction.

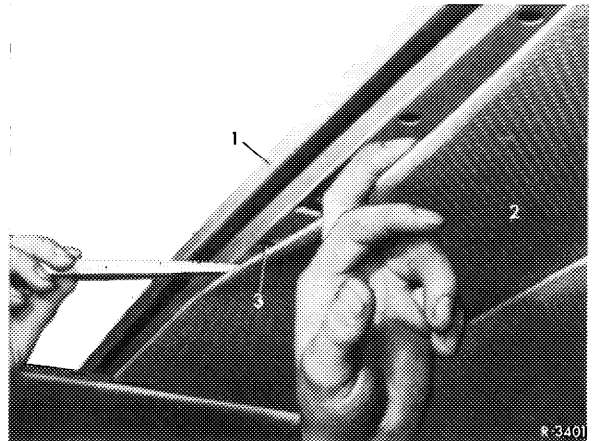


2 Open sliding roof completely and remove slide rail (12) at left and right.

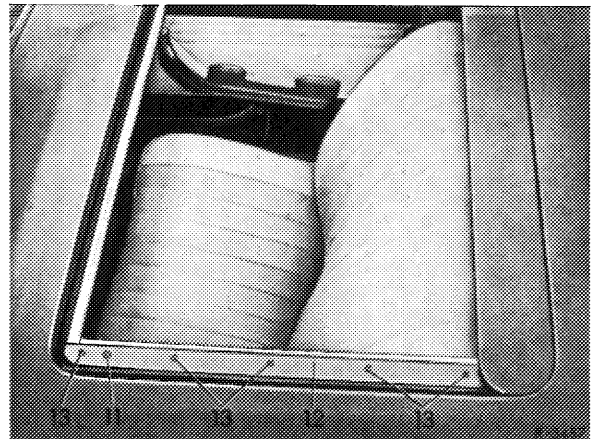


(Shown on model 114/115)

3 Close sliding roof and unscrew locking screw (16) left and right.

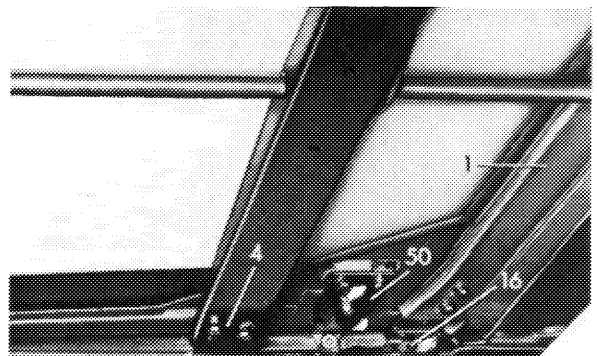

4 With sliding roof 1/4 open, remove connecting clip (7).

5 Permit drive cable to return and remove sliding roof cover (1) in upward direction.

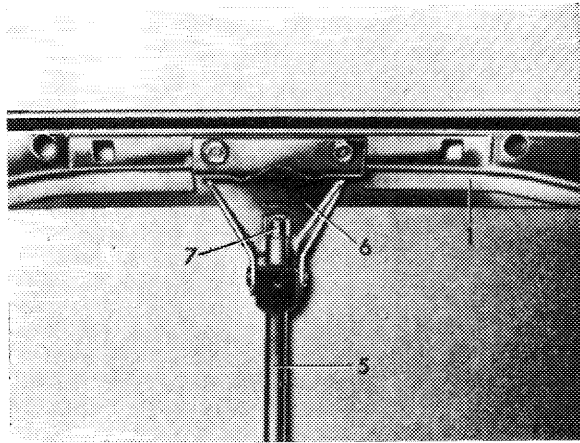

Installation

6 Prior to installation, thoroughly grease all sliding shoes, as well as the slide rails with Anticorit PRC II by means of a piece of felt attached to an extension or a brush up to rear end.

7 For installation proceed vice versa. Install sliding roof headlining following adjustment.

8 Adjust sliding shoes and sliding roof cover (77–110).