


B. Model 116


Bulbs can be replaced from direction of engine compartment.

Removal


1 Unscrew knurled nut (2) and take off cover (on vehicles without light range regulation).

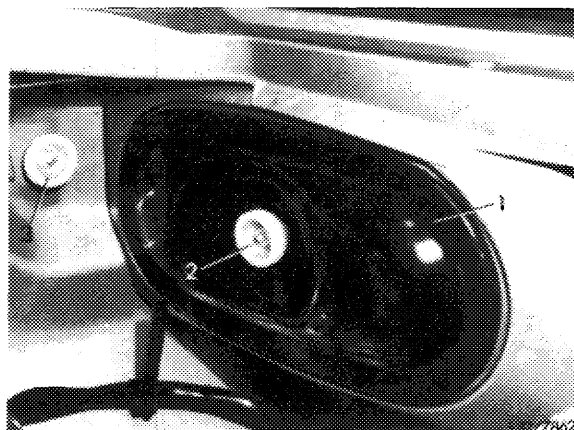

On vehicles with light range regulation, unhook spring clip (2) and remove cover.

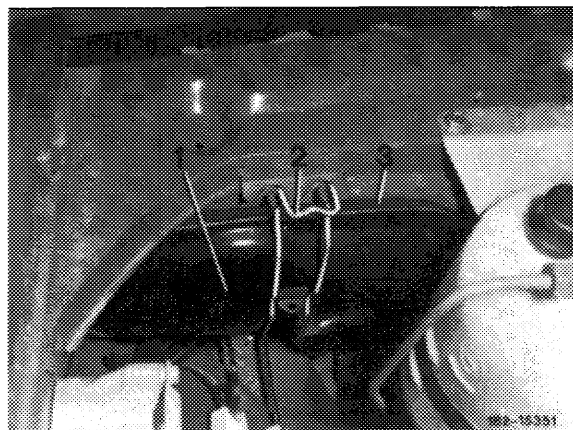

2 Pull coupler (2) from bulb. Unscrew lamp socket (5) from bayonet lock and remove bulb for main headlamp or parking lamp.

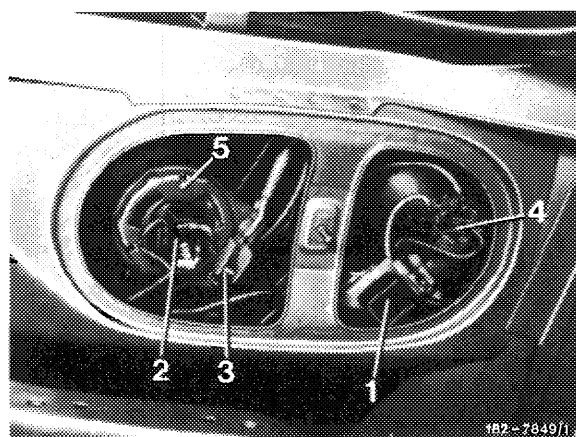

Installation

3 For installation proceed vice versa.

Note: When inserting bulbs, pay attention to correct seat of locating pins.

Do not touch bulbs with bare fingers, but only use a clean cloth or tissue paper during insertion. If not, heating of bulbs will generate grease vapors, which will settle on mirrors and impair their reflection capacity.

When mounting cover, make sure that the rubber seal is not twisted to cause a leak. If seal must be renewed, glue to cover.