


82-067 Removal and installation of lamp unit glass

A. Model 114, 115

Removal

- 1 Remove ornamental ring (82-052).
- 2 Turn the 2 turn clamps (2) with a wide screwdriver in front of glass (7) aside.
- 3 Pull the 4-part clamps in forward direction and push away from glass, then remove glass.

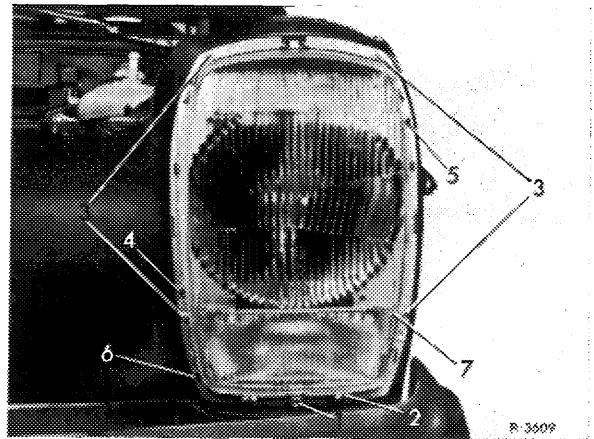


Installation

- 4 For installation proceed vice versa.

B. Model 116

Removal

- 1 Remove lamp unit (82-052).
- 2 Turn the 8 turn clamps (1) 4 at top, 4 below, with pliers in front of glass aside and remove glass.

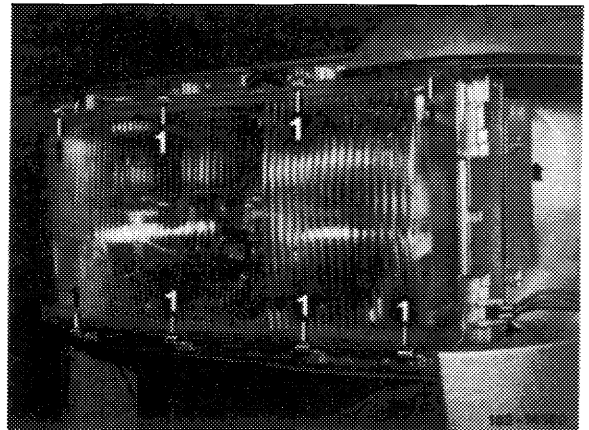

Installation

- 3 For installation proceed vice versa.

Note: Prior to installing glass, check seal between glass and lamp unit frame for correct seat.