
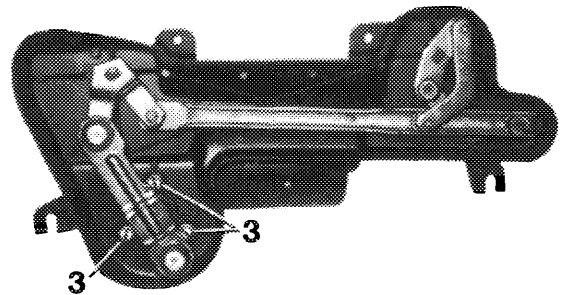
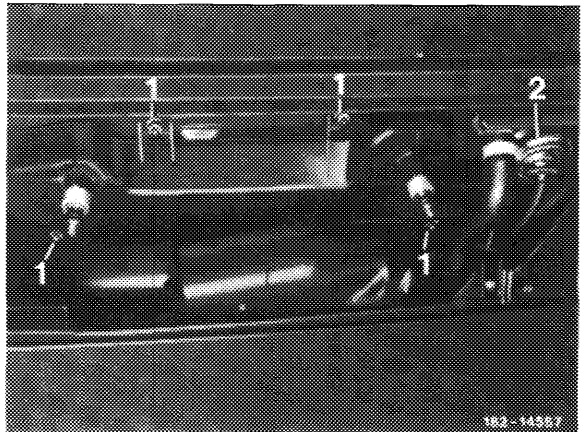


## B. Model 116

### Removal

---

- 1 Remove wiper arms (82-610).
- 2 Remove covering caps (1) left and right. Unscrew nuts (2) left and right. Remove ornamental grille (3) after removing expanding rivets (4).
- 3 Unscrew fastening nuts (1).
- 4 Pull off connecting cable of wiper motor under plug connection under instrument panel left and pull in outward direction together with rubber grommet (2).
- 5 Pull off drive rod and unscrew crank of wiper motor. Unscrew fastening screws (3) of wiper motor.

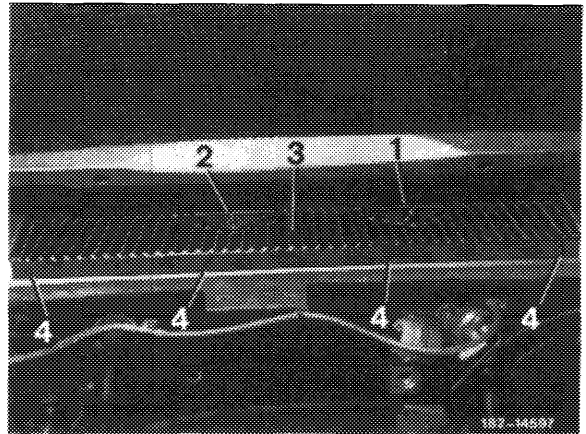

- 6 Remove wiper motor (1) from wiper housing (2).

### Installation

---

- 7 For installation proceed vice versa.

**Note:** Remove rubber seal mounted around wiper housing during installation or leave off.

