

88–220 Removal and installation, disassembly and assembly of rear bumper

Removal

- 1 Remove lateral cover in trunk on both sides.
- 2 Remove screw for bumper shell underneath.
- 3 Unscrew bumper mounting bracket under rear center piece.
- 4 Remove bumper with mounting bracket.

Disassembly

- 5 Slightly unbend fastening tongue for protective rail.
- 6 Pull off protective rail.
- 7 Unscrew both mounting brackets for bumper.
- 8 Unscrew cover molding on bumper joint on both sides, pull upward and remove.
- 9 Remove bumper shell left and right.
- 10 Unscrew reinforcement and separate from bumper shell center.

Assembly

- 11 For assembly proceed vice versa.

Installation

- 12 For installation proceed vice versa.

Note: Align bumper in such a manner that the distance from center of bumper top is the same on both sides.