


91–105 Removal and installation of driver's seat

Removal

- 1 Move height adjustment into top position and slide driver's seat completely forward.
- 2 Disconnect draw spring (3) for height adjustment at front by means of hook.
- 3 Unscrew the two rear screws (1).
- 4 Move height adjustment into bottom position and slide driver's seat toward the rear.
- 5 Unscrew screws on front seat guide rails on both sides.
- 6 Remove driver's seat.

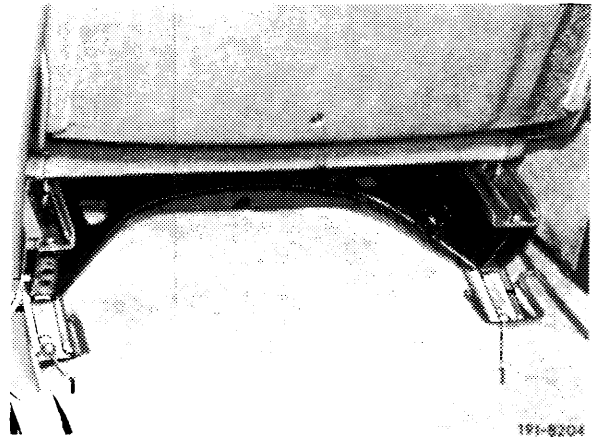

Installation

- 7 Prior to installing seat, slide both guide rails (2) forward and attach draw spring (3) with rubber ring (4).
- 8 For further installation proceed vice versa.

