



Preparation for test

1 Remove cover (1) at front right under instrument panel, while removing screw (2) on front wall and clips (3) in air duct (4).

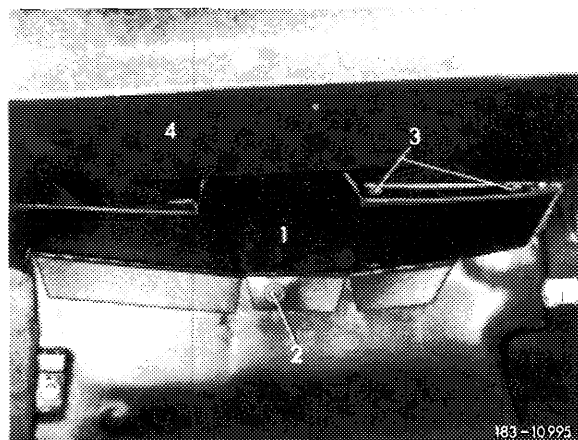

- 1 Cover
- 2 Screw
- 3 Clips
- 4 Air duct

2 When installing cover (1), make sure that the air outlet opening (5) in air duct (4) is not covered.

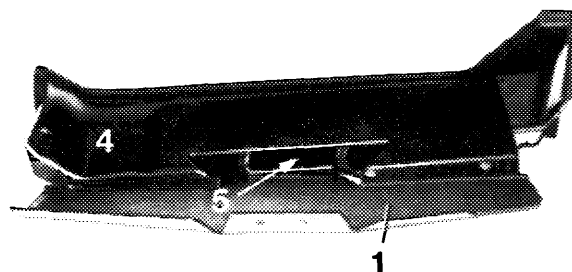


- 1 Cover
- 4 Air duct
- 5 Air outlet opening

183-11737

Connecting tester


3 Connect vacuum line (4) to black vacuum line (37), while removing blind seal.

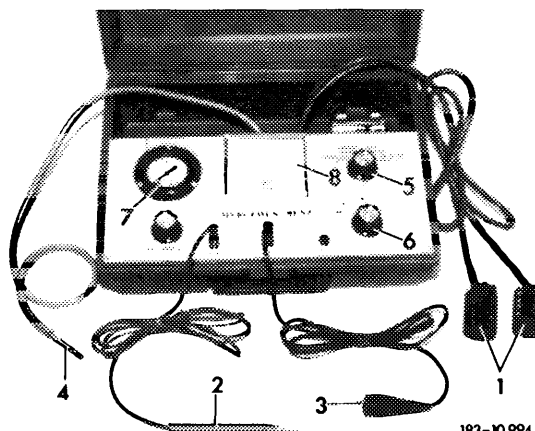

- 1 10-point plug connection
- 2 Volt or ohmmeter needle
- 3 Connection (vehicle ground)
- 4 Vacuum line
- 5 Voltmeter switch
- 6 Mode switch
- 7 Vacuum measuring instrument
- 8 Voltmeter

183-10994

- 4 Connect the two 10-point plugs (1) of tester with plug connection (5).
- 5 Connect connections (3) of tester to vehicle ground (seat rail).

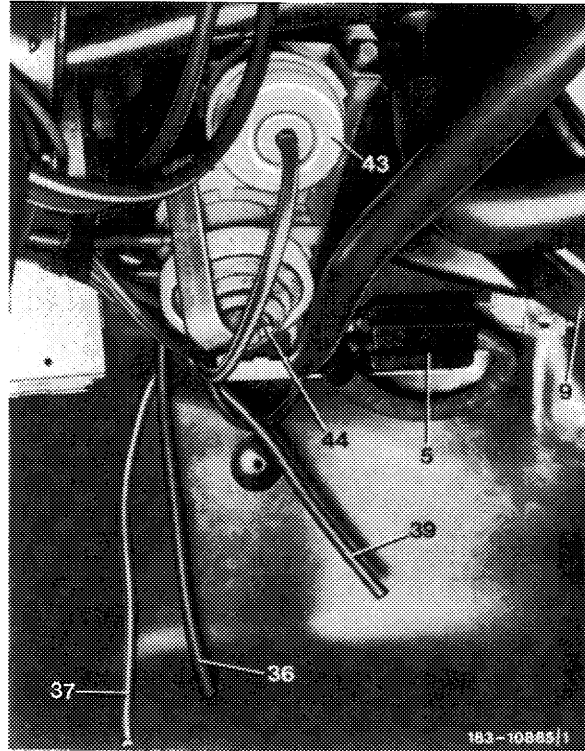

Layout of 10-point plug connection for tester

- 5 Plug connection for tester
- 37 Vacuum connection for tester