

## COMPONENT LOCATIONS

### AUTOMATIC CLIMATE CONTROL

		Page-Figure
ACC Amplifier .....	Behind glove box .....	201-2
ACC Compressor Clutch .....	Front of compressor, lower LH side or engine	
ACC Control Panel .....	On upper console	
ACC Double Pole Relay .....	Behind glove box .....	201-1
ACC Servo Assembly .....	On top of RH front wheel well	
A/C In-Line Fuse .....	Front of compressor, lower LH side of engine	
A/C Start Relay .....	In fuse box	
Ambient Temperature Sensor	Off RH bottom corner of chassis number plate	
Auxiliary Water Pump .....	Ahead of RH front wheel well	
Bi-Level Compressor		
Vacuum Switch .....	Behind upper console	
Bi-Level Vacuum Switch .....	Behind upper console	
Blower Master Vacuum		
Switch .....	Behind glove box .....	201-1
Blower Motor .....	To right of glove box .....	201-2
Blower Resistors .....	In blower housing .....	209-2
Compressor Low Pressure		
Cut-Out Switch .....	On receiver-drier .....	208-2
Compressor Terminal Block ..	On compressor	
Compressor Vacuum Switch ..	Behind center of glove box .....	201-1
Evaporator Temperature		
Regulator .....	Behind glove box	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
In-Car Temperature Sensor.	Top middle of instrument panel	
Switch-Over Valves .....	Behind center of console	
Water Pump Temperature		
Switch .....	Behind glove box .....	201-2
C125 (6 pins) .....	Behind ACC servo assembly	
C126 (2 pins) .....	Behind RH side of glove box	
C127 (2 pins) .....	Behind auxiliary water pump	
C133 (12 pins) .....	Above passenger's footwell, next to console	
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	

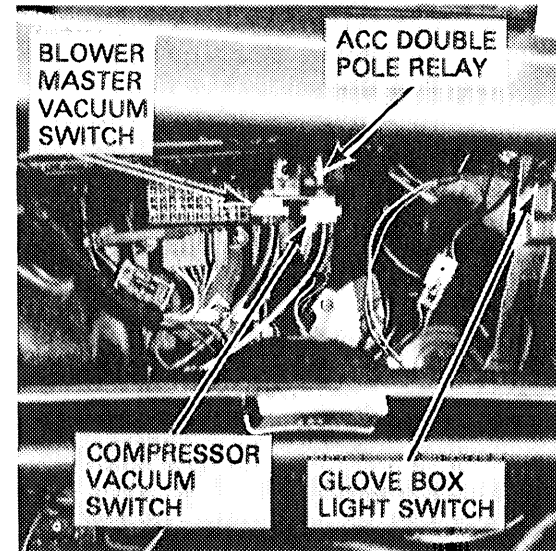


Figure 1 - Behind Glove Box

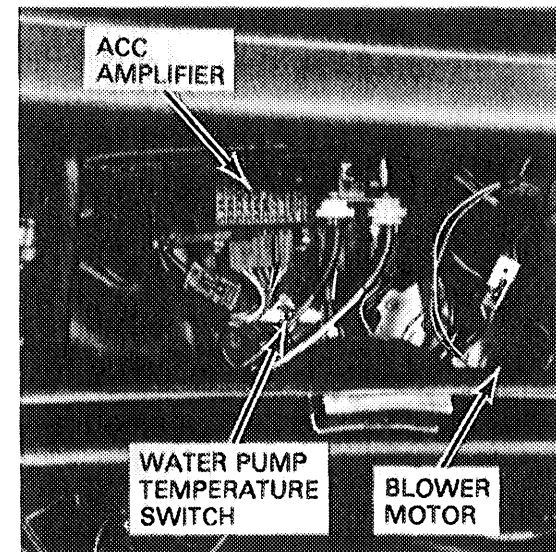


Figure 2 - Behind Glove Box

# COMPONENT LOCATIONS

## AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Behind LH kick panel	202-1
Coolant Temperature Switch	Top of engine	
Fuse Box	LH rear corner of engine compartment	100-1
Receiver Drier Temperature Switch	On top of receiver drier	208-2
G107	LH radiator support	204-1

## BACKUP LIGHTS/TRANSMISSION KICKDOWN

Fuse Box	LH rear corner of engine compartment	100-1
Kickdown Solenoid	RH front of transmission	202-2
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup Light Switch	LH side of transmission	204-2
C104 (14 pins)	In base of parking brake support	202-1
G103	Behind LH rear seat	
G104	Behind RH rear seat	

## CENTER CONSOLE ILLUMINATION

Fuse Box	LH rear corner of engine compartment	100-1
G102	Behind instrument cluster	

## CHARGING SYSTEM

Alternator	Front of engine	
Battery	RH front of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	207-1
Light Switch	Instrument panel, left of steering column	203-1
Starter Assembly	Lower RH rear of engine	
C105 (4 pins)	Below battery	205-1
G100	Below battery	

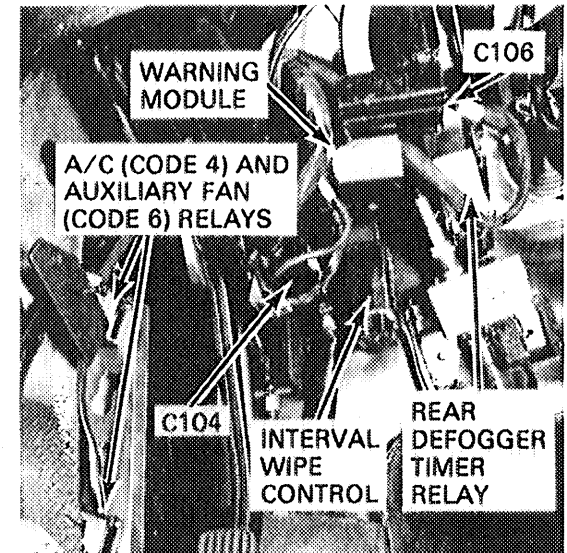


Figure 1 - LH Kick Panel

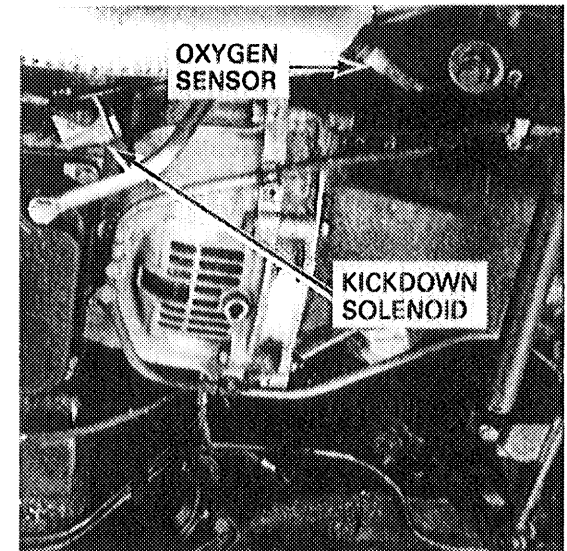


Figure 2 - RH Side of Transmission

## COMPONENT LOCATIONS

### CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
Antenna Motor/Relay .....	Behind LH rear wheel well	
Antenna Switch .....	On upper console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
C104 (14 pins) .....	In base of parking brake support .....	202-1
C135 (6 pins) .....	Behind LH rear wheel well	
G102 .....	Behind instrument cluster	
G103 .....	Behind LH rear seat	

### COURTESY LIGHTS

Door Switches .....	In each door jamb .....	205-2
Front Dome Light and Switch .....	Behind rear view mirror assembly	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Dome Light Switch .....	On upper console	
Warning Module .....	Behind instrument panel, left of steering column	
C104 (14 pins) .....	In base of parking brake support .....	202-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G103 .....	Behind LH rear seat	
G104 .....	Behind RH rear seat	

### GLOVE BOX LIGHT

Brake Switch .....	Middle of brake pedal assembly	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glove Box Light Switch .....	RH side of glove box .....	201-1
G101 .....	RH front fender, behind headlights	

Page-Figure

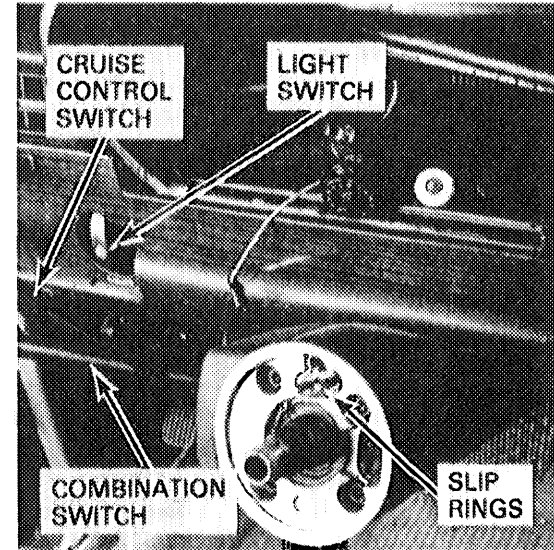


Figure 1 - LH Side of Instrument Panel

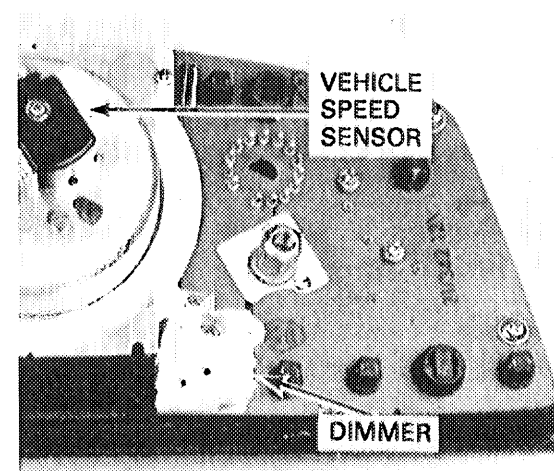


Figure 2 - Back of Instrument Cluster

# COMPONENT LOCATIONS

## HEADLIGHTS/FOG LIGHTS

		Page-Figure
Combination Switch .....	Upper LH of steering column .....	203-1
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column .....	203-1
C106 (14 pins) .....	Between parking brake and brake support ...	202-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G107 .....	LH radiator support .....	204-1

## HEATED SEATS

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Heated Seat In-Line Fuses	Above parking brake support	
Seat Heaters .....	In each seat cushion	
Seat Heater Switches .....	In center console	
G102 .....	Behind instrument cluster	

## HORNS

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Horn Switch .....	Behind center of steering wheel	
Slip Rings .....	Behind steering wheel .....	203-1
C106 (14 pins) .....	Between parking brake and brake supports ...	202-1
G102 .....	Behind instrument cluster	

## LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column .....	203-1
C104 (14 pins) .....	In base of parking brake support .....	202-1
G101 .....	RH front fender, behind headlights	
G103 .....	Behind RH rear seat	
G104 .....	Behind RH rear seat	
G107 .....	LH radiator support .....	204-1

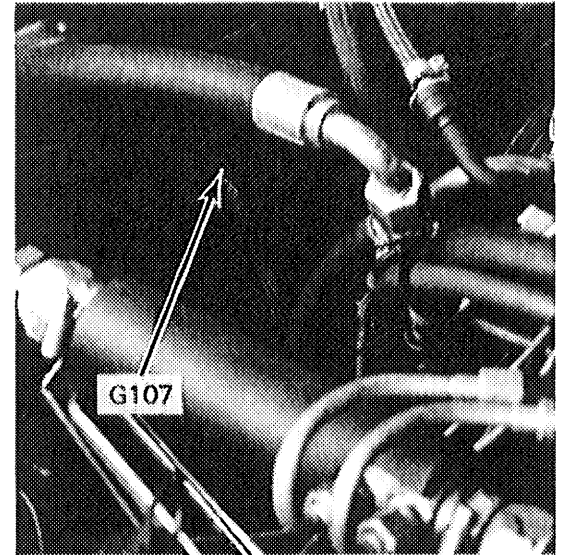


Figure 1 - LH Radiator Support

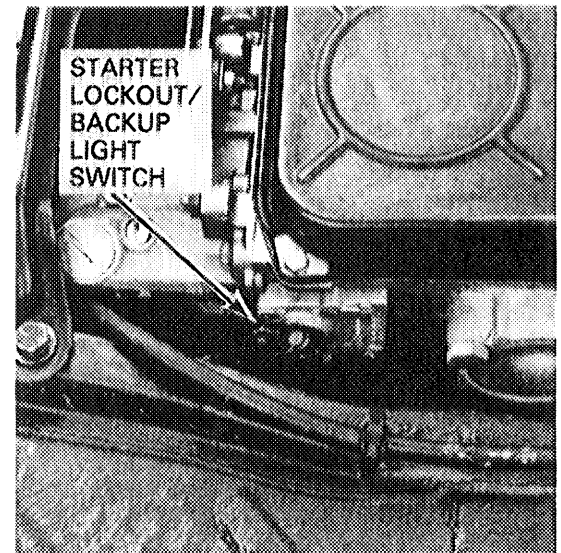


Figure 2 - LH Side of Transmission

## COMPONENT LOCATIONS

### POWER DISTRIBUTION

		Page-Figure
Diagnostic Plug .....	On front of LH front fender .....	207-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column .....	207-1
In-Line Radio Fuse .....	In fuse block .....	206-1
Starter Assembly .....	Lower RH rear of engine	
C104 (14 pins) .....	In base of parking brake support .....	202-1
C105 (4 terminals) .....	Below battery .....	205-1
C116 (2 terminals) .....	LH front wheel well, below cruise control actuator .....	207-2
G100 .....	Below battery .....	205-1

### POWER WINDOWS

Console Switch Group .....	On center console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Window Switches .....	Below each rear window	
Window Motors .....	Below each window .....	205-2
Window Relay .....	Behind LH kick panel	
C107 (6 pins) .....	Under console	
C108 (2 pins) .....	Under console	
G102 .....	Behind instrument cluster	

### REAR DEFOGGER

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Defogger Switch .....	On upper console	
Rear Defogger Timer Relay .....	To right of parking brake support .....	202-1
C104 (14 pins) .....	In base of parking brake support .....	202-1
G102 .....	Behind instrument cluster	
G104 .....	Behind RH rear seat	

### SLIDING ROOF

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Sliding Roof Motor .....	In trunk, above LH rear wheel well	
Sliding Roof Switch .....	On upper console assembly	
G102 .....	Behind instrument cluster	

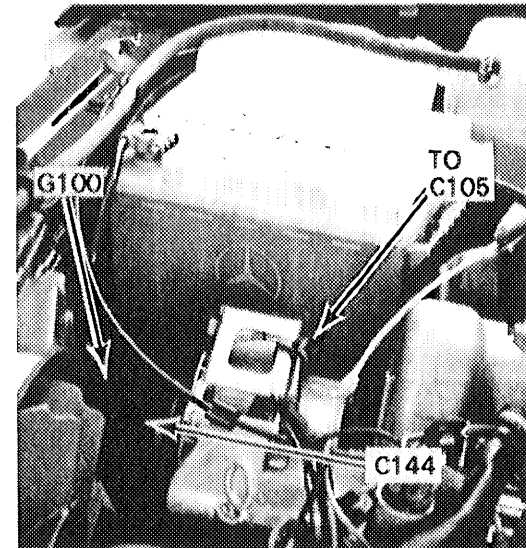


Figure 1 - Beside Battery

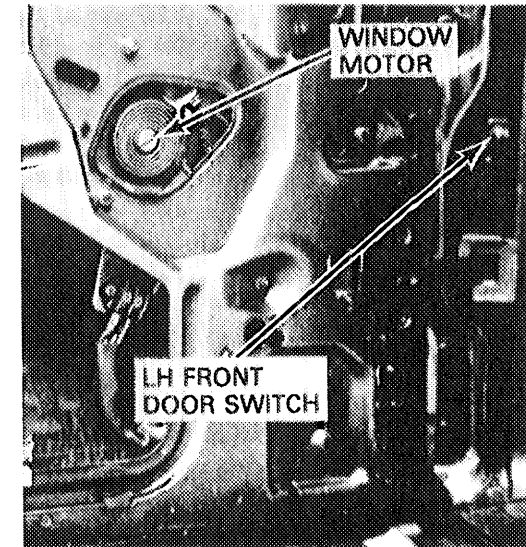


Figure 2 - Driver's Door

## COMPONENT LOCATIONS

<b>START/IGNITION/FUEL DELIVERY/LAMBDA CONTROL</b>	<b>Page-Figure</b>
A/C-Start Relay .....	In fuse box ..... 206-1
Cold-Start Valve .....	To right of front part of LH valve cover
Diagnostic plug .....	Top of LH front wheel well ..... 207-2
Electronic Fuel Pump Relay ..	In fuse box ..... 206-1
Frequency Valve .....	LH side of engine, behind fuel distributor
Fuel Pump .....	Behind differential ..... 206-2
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
Ignition Coil .....	Front of LH front wheel well
Ignition Resistors .....	Front of LH front wheel well
Ignition Switch .....	Instrument panel, right of steering column .... 207-1
Ignition Switching Unit .....	Attached to front of LH front fender ..... 207-2
Lambda Electronic Control Module (ECM) .....	Behind RH kick panel
Lambda Voltage Supply Relay .....	Under RH side of instrument panel
Oil Temperature Switch .....	Next to base of oil filter
Oxygen Sensor .....	On exhaust pipe, behind primary catalyst ..... 202-2
Over Voltage Protection Unit .....	Below Lambda Electronic Control Unit (ECM)
Starter Assembly .....	Lower RH rear of engine
Starter Lockout/Backup Light Switch .....	LH side of transmission ..... 204-2
Thermo-Time Switch .....	Below middle part of RH valve cover
Throttle Switch .....	Front part of intake manifold, rear of throttle valve housing
Warm-Up Enrichment Compensator .....	Behind oil filter
C104 (14 pins) .....	In base of parking brake support..... 202-1
C105 (4 terminals) .....	Below battery ..... 205-1
C116 (2 terminals) .....	LH front wheel well, below cruise control actuator ..... 207-2
C143 (2 pins) .....	Above oxygen sensor
C144 (3 pins) .....	In front of LH front wheel well
C145 (1 cavity) .....	Behind LH headlights
G100 .....	Below battery ..... 205-1
G101 .....	RH front fender, behind headlights
G102 .....	Behind instrument cluster
G103 .....	Behind LH rear seat
G106 .....	Ignition coil mounting bracket
G108 .....	Front of engine, at lifting bracket

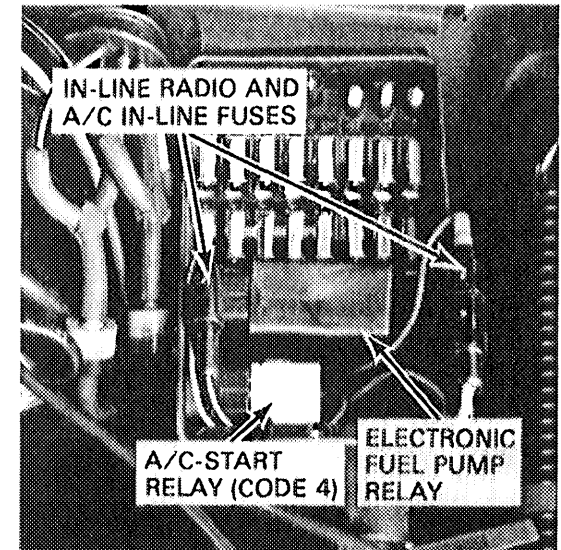


Figure 1 - LH Rear Corner of Engine Compartment

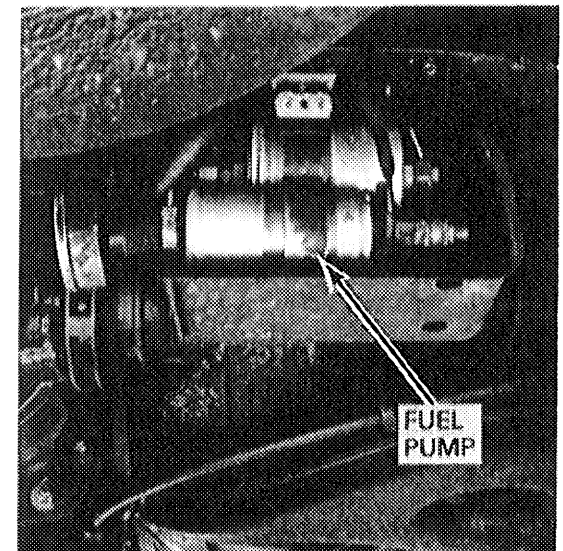


Figure 2 - Behind Differential

## COMPONENT LOCATIONS

### STOPLIGHTS/CRUISE CONTROL

Brake Switch .....	Middle of brake pedal support	
Cruise Control Actuator .....	LH rear corner of engine compartment	
Cruise Control Amplifier .....	To left of base of steering column	
Cruise Control Switch .....	Upper LH side of steering column .....	203-1
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Vehicle Speed Sensor .....	Mounted on speedometer .....	203-2
C104 (14 pins) .....	In base of parking brake support .....	202-1
C115 .....	Above RH front wheel well	
C140 (6 pins) .....	Behind LH side of instrument panel, above steering column	
G102 .....	Behind instrument cluster	
G103 .....	Behind LH rear seat	
G104 .....	Behind RH rear seat	

Page-Figure

### TURN SIGNAL/HAZARD LIGHTS

Combination Switch .....	Upper LH of steering column .....	203-1
Flasher .....	Between parking brake and brake support ....	209-1
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Switch .....	Behind gear shift selector	
C104 (14 pins) .....	In base of parking brake support .....	202-1
C106 (14 pins) .....	Between parking brake and brake support ....	202-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G103 .....	Behind LH rear seat	
G104 .....	Behind RH rear seat	
G107 .....	LH radiator support .....	204-1

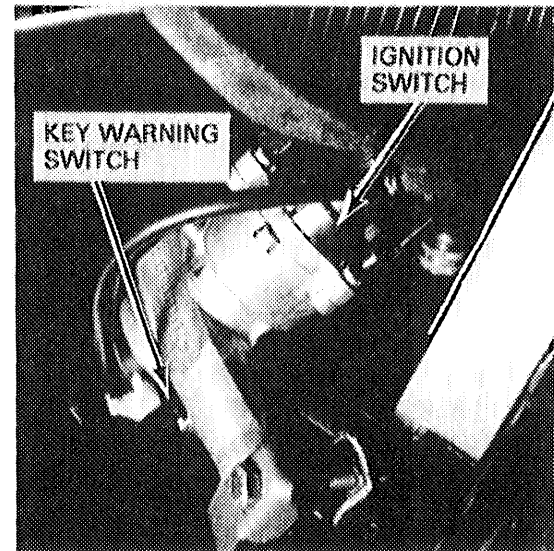


Figure 1 - Ignition Switch (As Seen From Below)

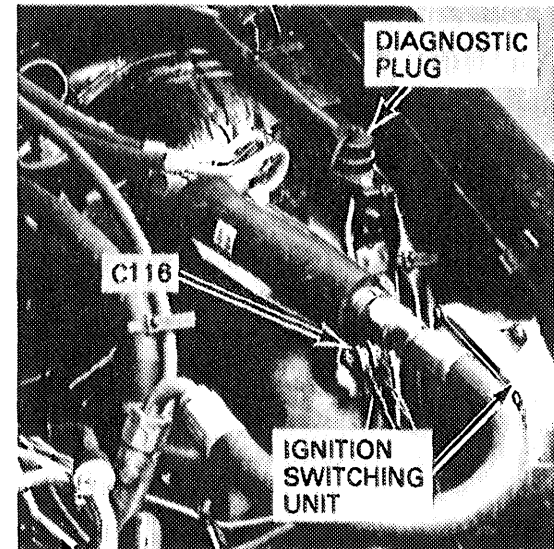


Figure 2 - LH Front Wheel Well

## COMPONENT LOCATIONS

### WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

	Page-Figure	
Brake Wear Sensors .....	In front brake pads	
Coolant Temperature Sender .	Top of engine	
Diagnostic Plug .....	Top of LH front wheel well	
Fuel Gauge Sender .....	Under first aid kit tray	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switching Unit.....	Attached to front of LH front fender .....	207-2
Light Switch .....	Instrument panel, left of steering column .....	203-1
Mileage Counter .....	Between bases of parking brake and brake supports .....	209-1
C104 (14 pins) .....	In base of parking brake support.....	202-1
C116 (2 pins).....	LH front wheel well, below cruise control actuator .....	207-2
C131 (2 pins).....	On LH front fender .....	208-1
C132 (2 pins).....	Behind RH front wheel well	
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G104 .....	Behind RH rear seat	
G106 .....	Ignition coil mounting bracket	

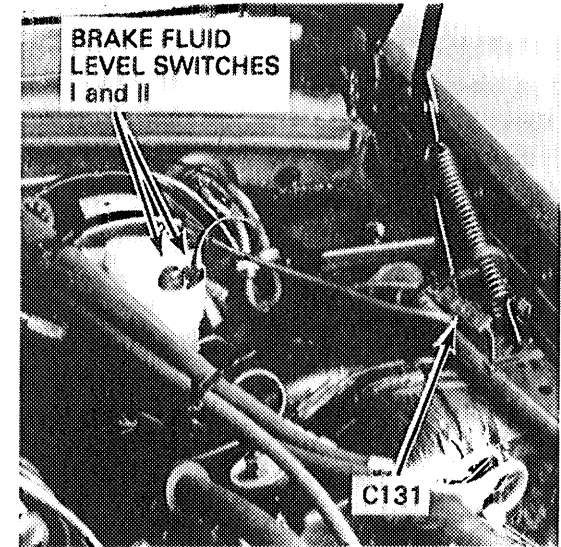


Figure 1 - Above LH Front Wheel Well

### WARNING SYSTEM

Brake Fluid Level Switches .....	In brake fluid reservoir	
Door Switches .....	In each door jamb	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Driver's Seatbelt Switch .....	Part of driver's seatbelt assembly	
Key Warning Switch .....	Part of ignition switch .....	207-1
Parking Brake Switch .....	Base of parking brake assembly	
Warning Module .....	Behind instrument panel, left of steering column	
C104 (14 pins) .....	In base of parking brake support.....	202-1
C131 (2 pins).....	On top of LH front fender.....	208-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	

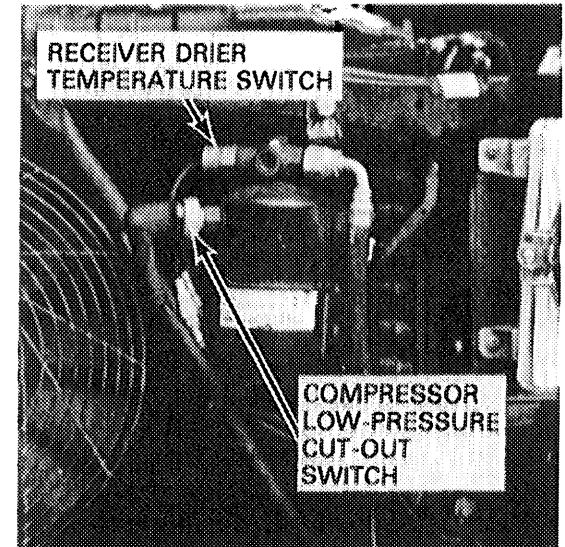


Figure 2 - LH Front of Radiator



## Fuse-Circuit List

Fuse	Rating (AMPS)	Circuits Protected	Page
1	8(WT)	Automatic Antenna	126
		Clock	115
		Courtesy Lights	118
		Lights: Hazard	112
		Trunk Light	111
		Warning System	113
2	16(PK)	Auxiliary Fan	122
3	8(WT)	Power Windows	129
4	8(WT)	Power Windows	129
5	16(PK)	Horns	122
		Sliding Roof	128
6	16(PK)	Automatic Climate Control	123
7	16(PK)	Heated Seats	127
		Rear Defogger	128
8	8(WT)	Backup Lights/Transmission Kickdown	116
		Warning Indicators/Gauges	115
		Warning System	113
9	Not used		
10	8(WT)	Auxiliary Fan	122
		Lights: Turn Signal	112
		Power Windows	129
		Stoplights/Cruise Control	109
		Warning Indicators/Gauges	114

Fuse	Rating	Circuits Protected	Page
11	16(PK)	Headlights	108
		Wiper/Washer	121
12	8(WT)	Cigar Lighter	126
		Glove Box Light	120
		Heated Seats	127
13	8(WT)	Center Console Illumination	117
		Instrument Cluster Illumination	115
		Lights: Marker/License	110
		Lights: Park/Tail (RH)	110
		Warning System	113
14	2	Radio	126
15	Not used		
16	8(WT)	Lights: Park/Tail (LH)	110
17	8(WT)	Headlights (RH High Beam)	108
18	8(WT)	Headlights (LH High Beam)	108
19	16(PK)	Headlights (RH Low Beam)/Fog Lights	108
20	8(WT)	Headlights (LH Low Beam)	108
In-Line	A:2	Automatic Climate Control	124
	B:8	Automatic Climate Control	124

## COMPONENT LOCATIONS

### WIPER/WASHER

		Page-Figure
Combination Switch .....	Upper LH of steering column .....	203-1
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Interval Wipe Control .....	Behind instrument panel, left of steering column .....	209-1
Washer Motor .....	Below battery	
Wiper Motor .....	In center of fresh air duct	
C106 (14 pins) .....	Between parking brake and brake support .....	202-1
C112 (6 pins) .....	Near wiper motor	
G102 .....	Behind instrument cluster	

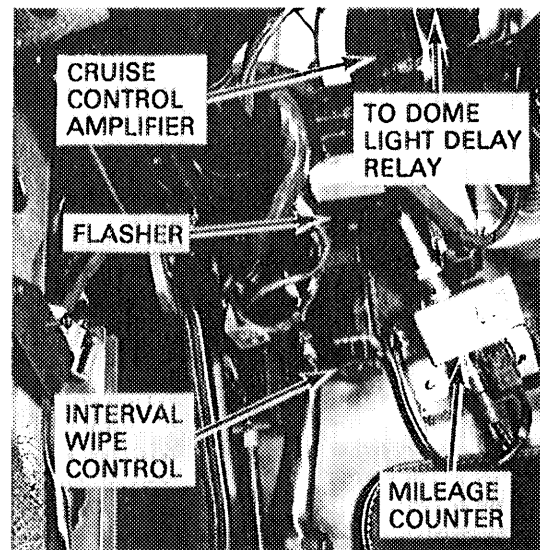


Figure 1 - LH Kick Panel

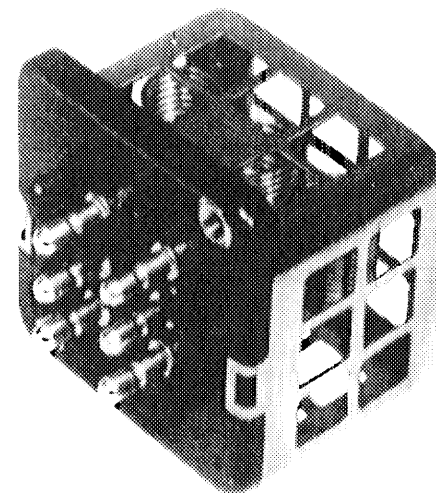


Figure 2 - Blower Resistors (Mounted in Blower Housing)