


Testing and adjusting values

| | |
|---|----------------|
| Distance "a" between choke housing and driver (197) | approx. 1.0 mm |
| Choke cover preload | to mark |

Checking, correcting


- 1 Check whether driver (196 and 197) is at right angle in relation to choke housing and bend lever accordingly, if required.
- 2 Operate throttle valve lever by half, push driver (196 or 197) to the left up to stop.
- 3 Check whether choke valve is closed free of play and distance "a" between driver (197) and choke housing amounts to approx. 1.0 mm.

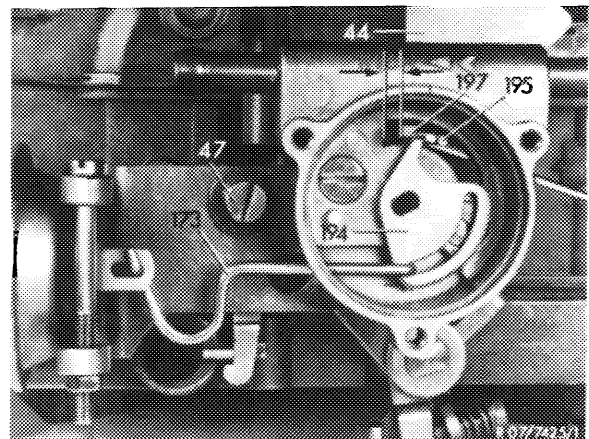


- 4 Disconnect choke rod, if required, and bend as needed.

Attention!

To avoid distortion of driver (196), support choke rod.

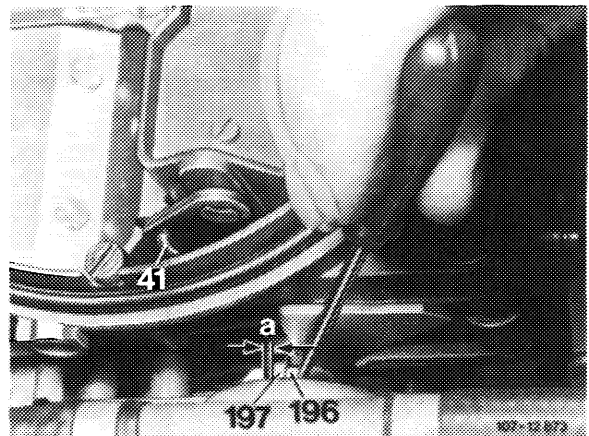

- 5 Actuate throttle valve lever by half. Push driver (194 or 196) to the left up to stop.

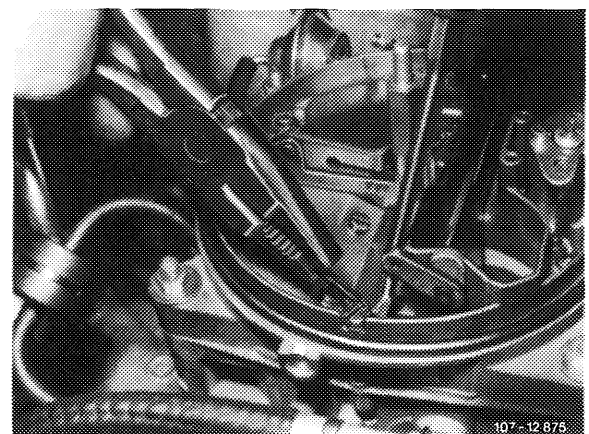

Rebending choke rod

6 Check marking notch (arrow) in extension of driver (194 or 196) and punch in new notch, if required.

