

A. Model 107.04

**Note**


---

On models 107.02, 116, 123 and 126 sedan and coupe the fuel expansion tank is integrated in fuel tank and cannot be disassembled.


**Removal**

---


- 1 Remove hard top. Open top lock and remove top.
- 2 Remove trunk mat.
- 3 Unscrew fastening screw (arrow) for expansion tank.

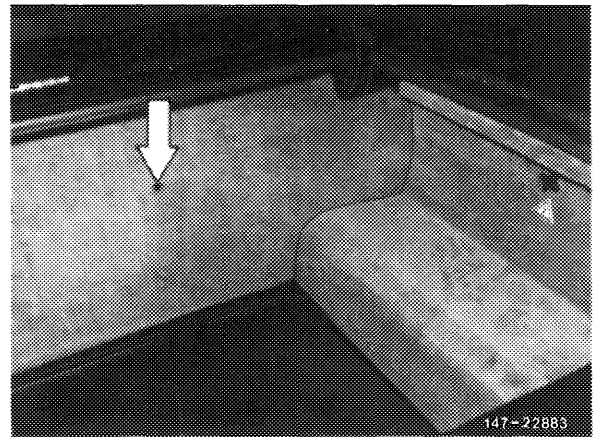


- 4 Unscrew rear wall and remove. For this purpose, loosen lining in upper edge range and laterally and unscrew fastening screws (arrows).

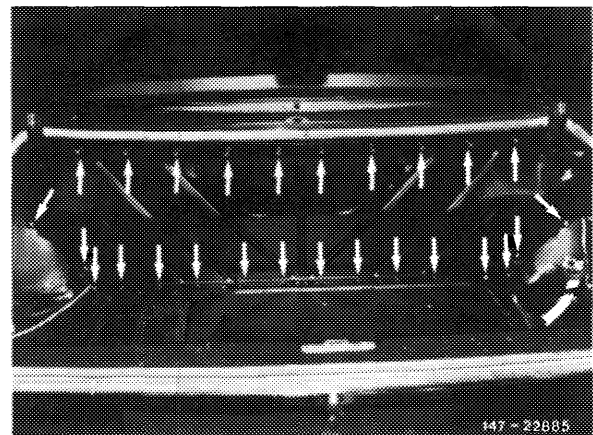


- 5 On vehicles with battery in trunk, remove battery and battery encasing (arrows).

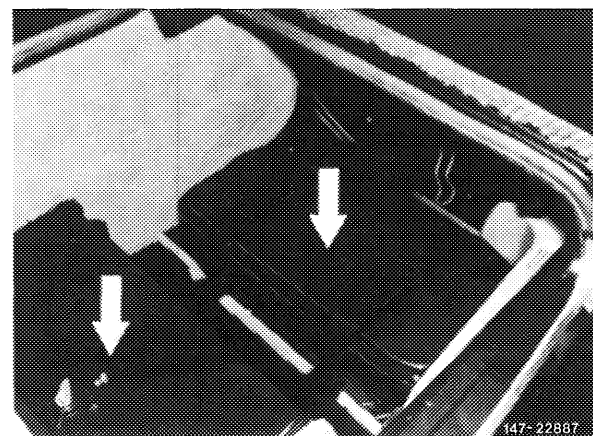

6 Remove protective sleeve (arrow) and unclip vent line from holding clamp.

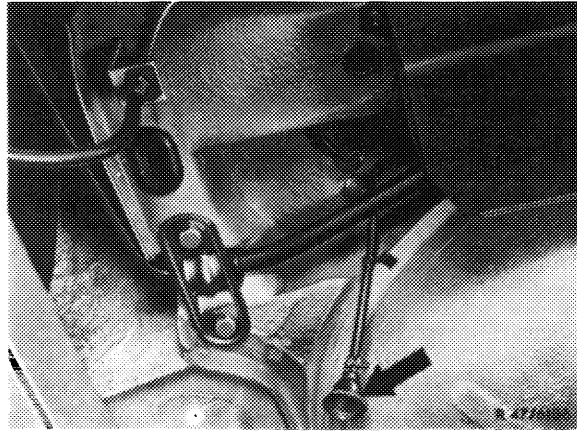


7 On (AUS), (J) and (USA) version vehicles, pull fuel hose (arrow) from vent line.

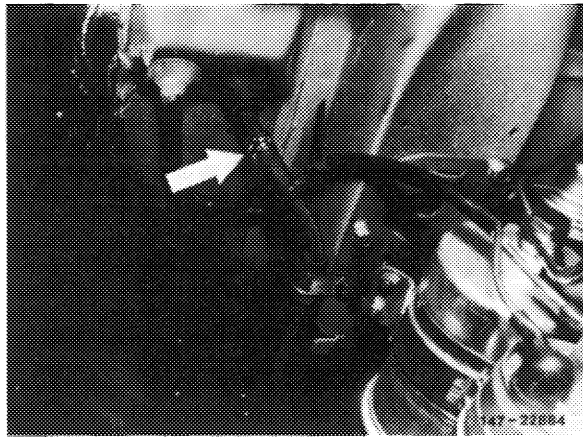


8 Remove fuel hoses (2) on fuel tank or on expansion tank.

**Note:** If the fuel hoses are removed or mounted on expansion tank, apply counterhold to connections when loosening or tightening hose clamps.

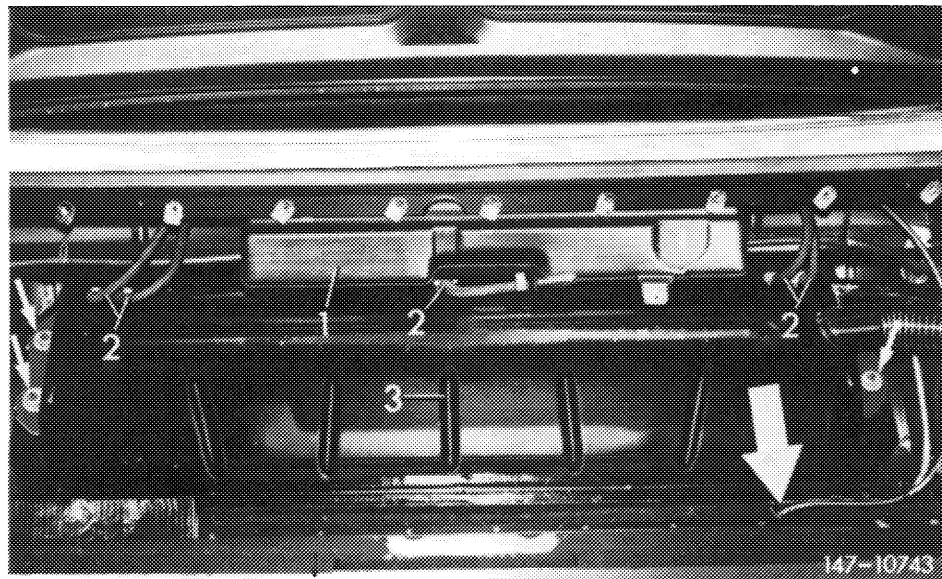

1 Expansion tank  
2 Fuel hoses  
3 Fuel tank  
Large arrow  
= Vent line

9 Unscrew fastening screws (arrows) and remove expansion tank, while pulling out black vent line in upward direction through trunk floor.

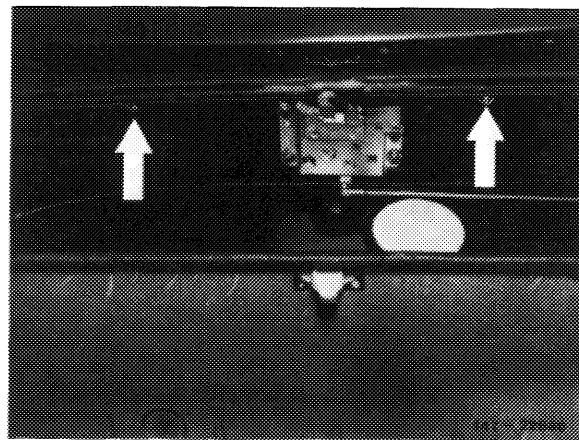


### Installation

---

10 For installation proceed vice versa. Make sure that the vent line is installed first behind filler neck of fuel tank.

**Note:** Check fuel system for leaks.

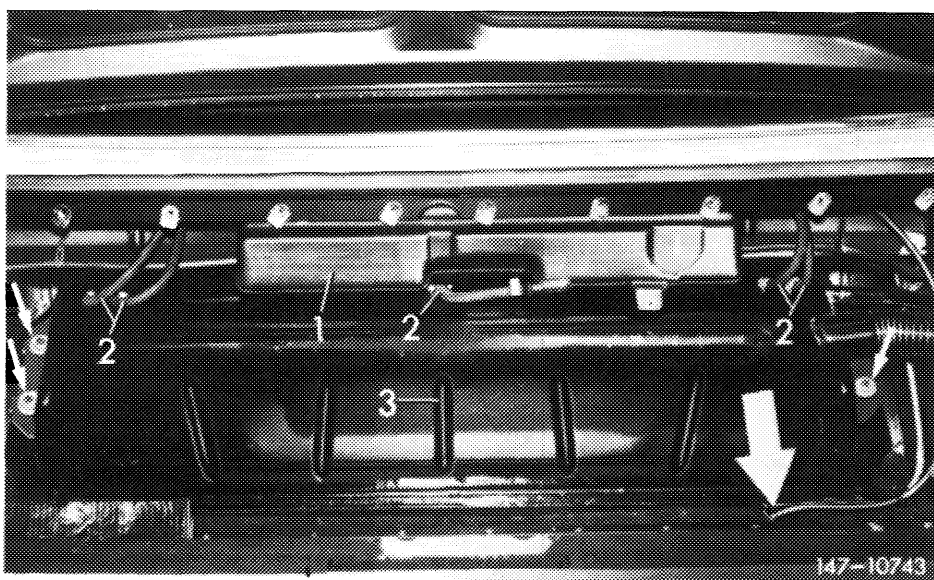

Large arrow  
= Vent line

## B. Model 123.09 T-sedan

### Removal

---



- 1 Remove spare wheel casing and spare wheel.

Slightly lift spare wheel casing during removal until pins (arrows) are disengaging.

- 2 Unscrew fastening screw (2) of lateral lining.

- 3 Loosen hose clamps (arrows) on vent lines and pull off hoses, tightly close lines and hoses.

- 4 Unscrew fastening screws (1) of expansion tank (55). For this purpose, slightly lift side and wheel house panelling at front fastening screw seen in driving direction. Remove expansion tank.

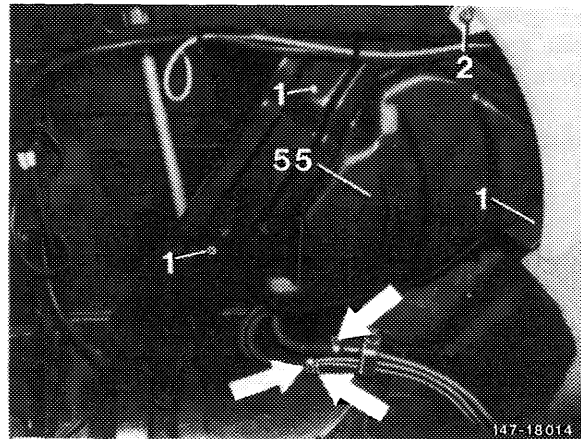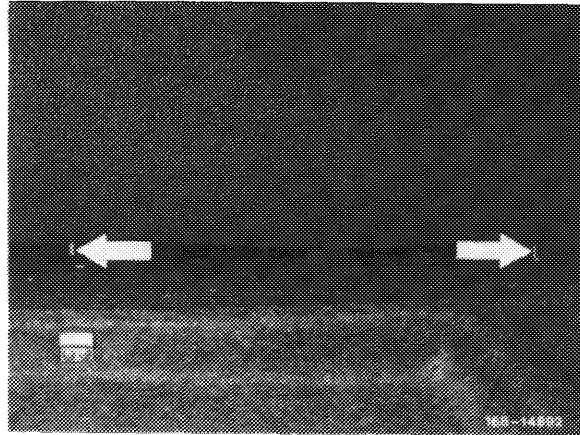

### Installation

---

- 5 For installation proceed vice versa.

**Note:** Check hose connections for leaks.

## 47-705 Removal and installation of fuel expansion tank (model 114)


---

### Removal

---

- 1 Remove spare wheel and plastic cover rail for vent lines (2).
- 2 Pull vent lines (2) out of connecting hoses (4).
- 3 Remove fuel expansion tank (1) complete with positive and negative vent line.

- |                                    |                                    |
|------------------------------------|------------------------------------|
| 1 Fuel expansion tank              | 3 Negative vent line to atmosphere |
| 2 Positive vent lines to fuel tank | 4 Connecting hoses                 |

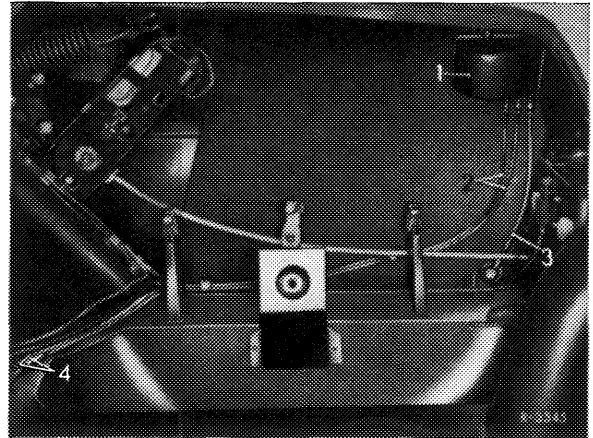

### Installation

---

- 4 For installation proceed vice versa.

#### Attencion!

Avoid sharp bends in positive and negative vent lines during installation.