


Controls

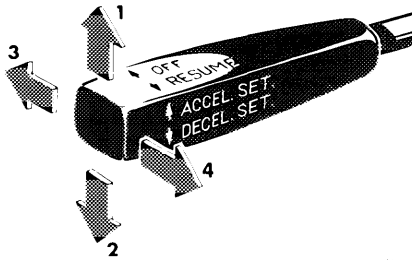

Cruise Control

Any given speed above a range of approximately 10—25 mph (16—40 km/h), depending on model, can be maintained with the cruise control by operating the switch.

1 = Setting (touch switch)
Accelerating (hold switch)

2 = Setting (touch switch)
Decelerating (hold switch)

Normally the vehicle is accelerated to the desired speed with the

accelerator. Speed is set by briefly pushing the switch to position "1" or "2", and the accelerator can be released. The speed can be increased (e. g. for passing) by using the accelerator. As soon as the accelerator is released, the previously set speed will be resumed automatically.

If the set speed is to be increased or decreased slightly (e.g. for adaptation to the flow of traffic), hold switch in position "1" or "2" until the desired speed is reached. When the switch is released, the newly set speed remains constant.

3 = Cancelling
To cancel the cruise control, briefly push lever to position "3".

The cruise control will also be cancelled if the brake pedal is actuated or if the vehicle speed drops on steep grades by more than 20 % below the set speed.

4 = Resume
If the lever is briefly pushed to position "4" when driving at a speed exceeding approximately 10—25 mph (16—40 km/h), depending on model, that speed is resumed which was set prior to the cancellation of the cruise control. The last memorized speed is cancelled when the key in the steering lock is turned to position "1" or "0".

Important:

Please do not use the cruise control if traffic conditions do not make it advisable to maintain a steady speed, i.e. in heavy traffic or on twisting or slick and muddy roads.

Position "Resume" should be engaged only if the driver is fully aware of the previously set speed and wishes to resume this particular preset speed.

When driving with the cruise control, the selector lever must not be shifted to position "N" as otherwise the engine will overrev.