



### Fuses

The fuse box (1) is located in the engine compartment.

A summary of the protected equipment is printed in the fuse box cover (2).

Fuse arrangement in the box — starting at engine side, proceeding from inside to outside —

upper row: odd numbers

1, 3, 5 etc. up to 15;

lower row: even numbers

2, 4, 6 etc. up to 16.

Fuses must not be repaired or bridged.

Spare fuses are stored in the fuse box (observe amperage and color code).

Determine the cause of a short prior to replacing a burned-out fuse.

### Battery

Approximately every four weeks, and more frequently in summer and in tropical zones, check the electrolyte level in the battery cells from outside.

The electrolyte level must be somewhere between the lower and the upper marking.

Replenish only with distilled water and do not use metal funnels. Do not overfill battery.

Lubricate battery terminals with acid-proof grease. Keep battery clean and dry.

Tow-start vehicle only with the battery connected. Only charge battery with rapid charging equipment if it has been disconnected from the vehicle's electrical circuit.

Note:

Battery terminals must not be loosened or detached while the engine is running as otherwise the three-phase alternator will be destroyed.

### Spark Plugs

This vehicle is equipped with spark plugs as required for driving in the USA. Should additional information be necessary, your MERCEDES-BENZ dealer will be happy to offer advice.