

Instruments and Controls

For more detailed descriptions see quoted pages.

- 1 Speaker grilles
- 2 Adjustable louvers for side ventilation (page 21)
- 3 Control lever for side ventilation (page 21)
- 4 Parking brake release knob (page 34)
- 5 Handle to disengage hood lock (page 34)
- 6 Parking brake pedal (page 34)
- 7 Combination switch (page 19)
- 8 Light switch (page 18)
- 9 Instruction tag (except tourist vehicle).
Use only unleaded gasoline
- 10 Cruise control (page 20)
- 11 Instrument cluster (page 10)
- 12 Horn control
- 13 Steering lock with ignition/starter switch (page 18)
- 14 Adjustable louvers for cooled air (page 21)
- 15 Control lever for cooled air (page 21)
- 16 Switch for rear passenger compartment light
- 17 Switch for automatic antenna (page 30)
- 18 Switch for heated rear window (page 27)
- 19 Switch for electric sliding roof (page 27)
- 20 Automatic climate control (page 21)
- 21 Radio (page 28)
- 22 Ash tray with lighter (page 27, 54)
- 23 Loudspeaker — fader control (page 29)
- 24 Switch group for window lifters (page 26)
- 25 Hazard warning flasher switch
Push switch = hazard warning flasher system
switched on
Push switch once more = hazard warning flasher
system switched off
- 26 Glove compartment (to open, shift handle
sideways). Only illuminated if steering lock is
in position "2".

